



Russell Hobbs

INSTRUCTIONS AND WARRANTY



MODEL NO. RHPAO30

RUSSELL HOBBS NEXUS 30L DIGITAL AIR FRYER OVEN SILVER

RUSSELL HOBBS NEXUS 30L DIGITAL AIR FRYER OVEN BLACK

1-year standard warranty.

Warranty will be extended another year if you register your product online within 12 months of purchase (visit <https://russellhobbswarranty.co.za/>)



Congratulations on purchasing your Russell Hobbs Nexus 30L Air Fryer Oven. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

FEATURES OF THE RUSSELL HOBBS NEXUS 30L AIR FRYER OVEN

The Russell Hobbs Nexus 30L Air Fryer Oven uses clever technology to harness the cooking power of pure, fast-circulating air to cook family favourites like chips or chicken nuggets without using little to no oil or fat. The coatings are still crispy, and the taste will speak for itself:

- 30L Capacity
- Signature Embossed Logo
- Powerful 1600W power
- Digital LED Display with button controls
- 8 Preset Menus: air fry, pizza, roast, broil, bake, ferment, dehydrate, ferment.
- Adjustable Temperature range 35°C - 230°C
- Adjustable timer
- Includes Rotisserie function
- Includes baking tray, wire rack, Air fry Basket, crumb tray, rotisserie handle, rotisserie spit shaft, and tray handle.
- For domestic use only
- 1 year standard warranty. Warranty will be extended for another year if you register your product online within 12 months of purchase (visit <https://russellhobbswarranty.co.za/>)

 
IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed including the following:


1. Please read the instructions carefully before using any appliance.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
3. Incorrect operation and improper use can damage the appliance and cause injury to the user.
4. The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
5. Avoid any contact with moving parts.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance.
8. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, the manufacturer or a qualified person must replace it in order to avoid an electrical hazard.
9. Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use. Allow a minimum of 200mm distance. Caution is required on surfaces where heat may cause damage - an insulated heat pad is recommended. Never place the appliance on a plastic, fabric or carpeted surface while cooking.
10. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
11. Do not touch hot surfaces – use the handles and knobs.
12. Let the unit cool down completely before you clean or store it.
13. Extreme caution must be used when moving the unit. It is recommended that you do not move it when it is switched on or before it has cooled down.
14. Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.

15. Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
16. To reduce the risk of electric shock, do not immerse or expose the body, plug or the power cord to water or any other liquid.
17. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use before cleaning or when adding or removing parts.
18. A short, detachable cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
19. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
20. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner.
21. Do not use the appliance on a gas or electric cooking top or over or near an open flame.
22. Use of an extension cord with the appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals, or tripped over.
23. This appliance is not suitable for outdoor use. For household use only. Do not use this appliance for anything other than its intended use.
24. DO NOT carry the appliance by the power cord.
25. Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
26. The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
27. In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair. Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions, could affect the safe operation of this machine.
28. Do not use accessories or attachments other than those we supply.
29. Do not use anything metal or sharp, you will damage the anti-corrosive surface.
30. Do not place any objects on top or bottom of the air fryer oven.
31. Keep clear of the vent at the rear of the appliance – hot air will emerge from it.


PARTS DIAGRAM

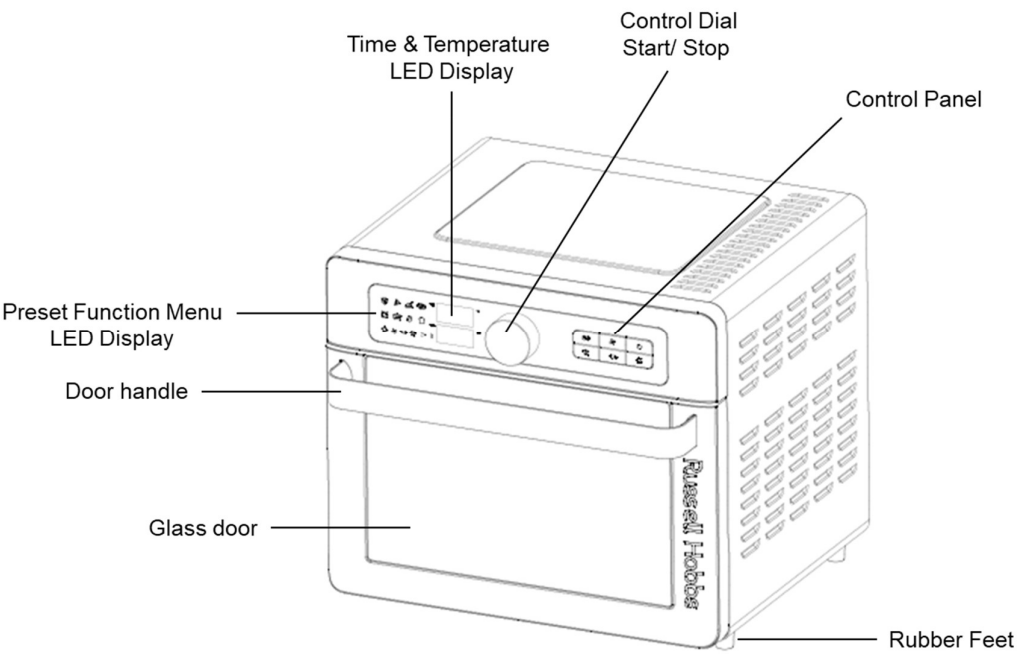

ACCESSORIES

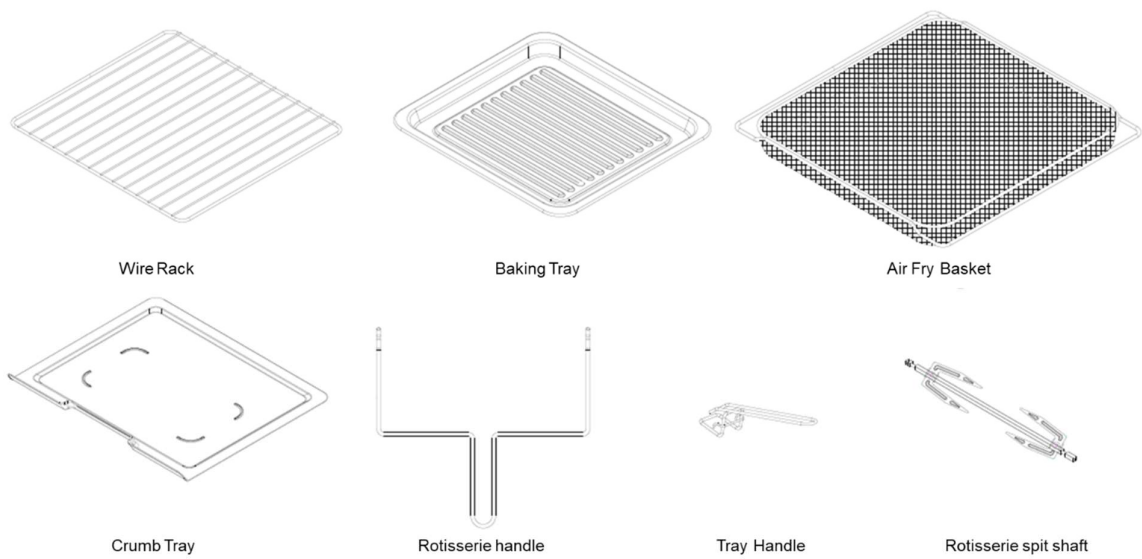 

CONTROL PANEL

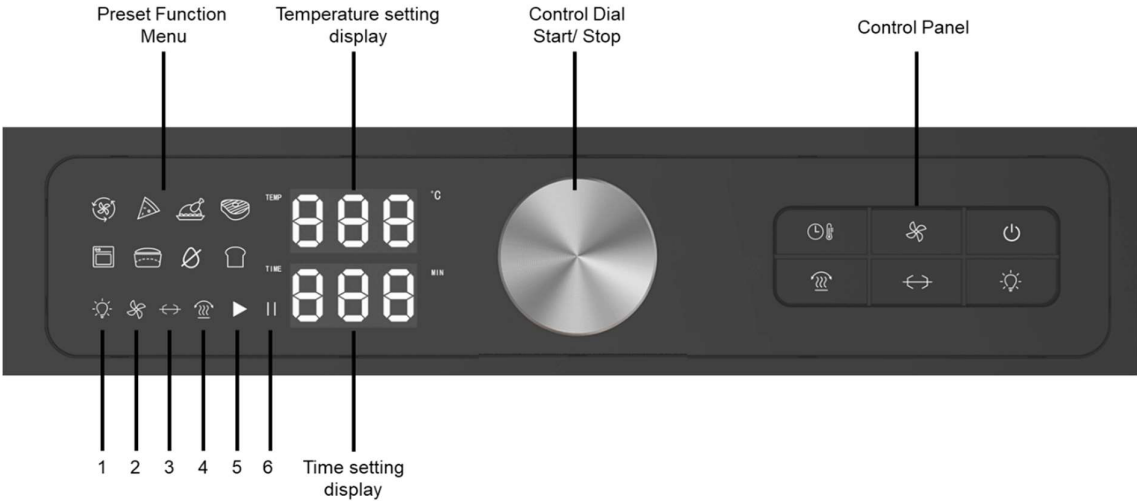 

INDICATOR LIGHTS

1	Oven light	4	Preheat indicator
2	Fan indicator	5	Start
3	Rotisserie indicator	6	Pause

FUNCTION CONTROLS

	Time and Temperature setting
	Fan on/ off
	Power on/ off
	Preheat function on/off
	Rotisserie function on/off
	Oven lamp on/off

	Air Fry		Bake
	Pizza		Ferment
	Roast		Dehydrate
	Broil		Toast

BEFORE FIRST USE

- Place the box containing the unit on a countertop or table.
- Remove the unit from the box and remove the outer packaging.
- Remove all the stickers or labels (except for the rating label).
- Thoroughly clean the accessories with hot water, some washing-up liquid, and a non-abrasive sponge.
- Wipe the inside and outside of the appliance with a moist cloth.

OPERATING INSTRUCTIONS

STANDARD AIR FRYER MODE

1. Place the unit on a firm, flat surface.
2. Insert the plug into the power socket and switch the power on.
3. Select the accessory tray required for your cooking dish, place the ingredients on it and slide back into the air fryer oven.
4. Press the power  button to turn the oven on.
5. Turn the dial to select the  air fryer function.
6. To adjust the temperature and/ or time, press  the on the control panel to toggle between temperature and timer. The corresponding setting will flash, turn the dial to adjust the setting. Clockwise to increase the value, counterclockwise to reduce the value.
7. Press the dial so start the cooking cycle.
8. When the cooking cycle is complete, the oven will beep and the stove light with light up.
9. Always open the air fryer oven door fully and remove the food carefully with oven mitt.

PREHEAT FUNCTION

1. Select the accessory tray required for your cooking dish, place the ingredients on it and slide back into the air fryer oven.
2. Press the power  button to turn the oven on.
3. Turn the dial to select the  air fryer function, or any of the other preset functions.
4. Press the preheat  button
5. To adjust the temperature and/ or time, press the  on the control panel to toggle between temperature and timer. The corresponding setting will flash, turn the dial to adjust the setting. Clockwise to increase the value, counterclockwise to reduce the value.
6. Press the dial so start the preheat cycle.
7. When the preheat cycle is complete the oven will automatically enter the cooking cycle.
8. When the cooking cycle is complete, the oven will beep and the stove light will light up.
9. Always open the air fryer oven door fully and remove the food carefully with oven mitt.

Turn the oven light on or off anytime by the simple press of the light button on the control panel. The oven light will automatically turn on when the oven door is opened.

NOTE: When the Air Fryer Oven is in use, be sure there is a 200mm space between the Air Fryer Oven and any other surface including cords. Always ensure the cord is not resting against the back of the Air Fryer Oven.

IMPORTANT: Never overfill the basket/baking tray/wire rack with ingredients as this could affect the quality of the cooking results.

POSITIONING THE RACK

- Positioning of the rack will depend on the size of the food and the desired browning.
- For best air frying results, position the air fry basket in the middle rack position.
- The cooking accessory used may tilt downward causing food to shift when pulled out, proceed with caution.

PRESET FUNCTIONS

1. Select the accessory tray required for your cooking dish, place the ingredients on it and slide back into the air fryer oven.
2. Press the power  button to turn the oven on.
3. Turn the dial to select the desired preset function from the eight (8) available pre-programmed settings (Air fry, Pizza, Roast, Broil, Bake, Ferment, Dehydrate, Toast). The preset menu icon will flash on the LED Display and the temperature and time will automatically appear on the LED Display. **NOTE:** Time and temperature can be adjusted for any setting.
4. Press the dial so start the cooking cycle.
5. When the cooking cycle is complete, the oven will beep and the stove light with light up.
6. Always open the air fryer oven door fully and remove the food carefully with oven mitt.

PRESET FUNCTION COOKING CHART

The cooking guidelines below are provided to illustrate recommendations on how to utilize the air fryer oven across different food types.

NOTE: This is only a suggestive guide. We recommend experimenting with times and temperature settings until you are happy with your desired results. It is important to remember that food of different quantities, sizes and thicknesses will cook at different rates.

Function	Icon	Top Element	Bottom Element	Side Heater	Default Time (hrs : min.)	Default Temperature °C	Adjustable time (min - hrs)	Adjustable Temperature Range °C	Turbo Fan (optional on/off)	Rotisserie Function (optional on/off)	Built-In preheat
Air fry		Yes	No	Yes	00:25	200°C	0:01-1:00	60-200°C	DEFAULT ON (always on)	YES (default off)	YES (default off)
Pizza		Yes	Yes	No	00:15	230°C	0:01-1:00	100-230°C	YES (default on)	YES (default off)	
Roast		Yes	Yes	No	01:00	230°C	0:01-4:00	100-230°C	YES (default on)	YES (default on)	
Broil		Yes	Yes	No	00:15	230°C	0:01-1:00	100-230°C	YES (default on)	YES (default off)	
Bake		Yes	Yes	No	00:30	180°C	0:01-1:00	100-230°C	YES (default on)	YES (default off)	
Ferment		No	Yes	No	01:30	40°C	0:01-12:00	35-60°C	NOT AVAILABLE	YES (default off)	NO
Dehydrate		No	Yes	No	08:00	65°C	0:01- 16:30	40-80°C	YES (default on)	YES (default off)	NO
Toast		Yes	Yes	No	2'15"	230°C (the preset time for 6 pcs bread)	Shows "1"	NOT AVAILABLE	YES (default on)	YES (default off)	NO
					3'00"		Shows "2"				
					3'40"		Shows "3"				
					4'10"		Shows "4"				
					4'35"		Shows "5"				
					5'00"		Shows "6"				
					6'00"		Shows "7"				

USING THE ROTISSERIE FUNCTION

PREPARE THE FOOD

1. Trim any excess fat or skin if necessary to ensure even cooking. Season or marinade your food as desired.
2. If cooking a chicken or similar item, use butcher's twine to secure the wings and legs close to the body. This prevents them from flopping around during rotation.

ASSEMBLE THE ROTISSERIE SPIT SHAFT/ ROD

1. If rotisserie forks are already assembled to the shaft/ rod, untighten the forks and remove both or one from the shaft/ rod.
2. Always ensure one (1) fork is assembled and tightened to the shaft/ rod
3. Insert the spit shaft/ rod through the center of the food, ensuring the food is centered and balanced.

4. Attach the second fork on the opposite end of the food and tighten the screw to hold it firmly.
5. Ensure the food is centered and balanced to ensure even cooking.

INSERT THE ROTISSERIE SPIT SHAFT/ ROD INTO THE AIR FRYER OVEN

1. Open the oven door and locate the rotisserie slots on each side of the oven interior.
2. Using the Rotisserie handle, place it under the shaft/ rod to lift it. Insert the shaft/ rod into the right of the oven wall first and then down into the bracket on the left side of the oven.
3. Ensure the shaft/ rod is securely in place and can rotate freely

SELECT THE ROTISSERIE FUNCTION

1. Close the oven door and press the power button  to turn the oven on
2. Turn the dial to select the  air fryer function.
3. To adjust the temperature and/ or time, press  the on the control panel to toggle between temperature and timer. The corresponding setting will flash, turn the dial to adjust the setting. Clockwise to increase the value, counterclockwise to reduce the value.
4. Press the rotisserie button  to select the rotisserie function. The rotisserie icon will light up on the LED Display.
5. Press the dial so start the cooking cycle.
6. When the cooking cycle is complete, the oven will beep and the stove light with light up.
7. Always open the air fryer oven door fully and remove the food carefully with a oven mitt. Place the rotisserie handle under the shaft/ rod and lift it out, left side first. Generally extract the food.

Turn the oven light on or off anytime by the simple press of the light button on the control panel. The oven light will automatically turn on when the oven door is opened.

NOTE: Refer to the preset function cooking chart to see which functions support the rotisserie feature.

CLEANING AND MAINTENANCE

- Before cleaning, switch the unit off and disconnect the plug from the power socket.
- Allow the unit to cool down.
- Wipe the unit with warm, soapy water using a sponge or dish cloth only. Normal dish washing liquid should be sufficient.
- Use a non-abrasive sponge or damp dish cloth to clean the exterior of the unit. Do not use bleach, solvents, abrasive cleaners or scouring pads to clean the exterior of your appliance as it can be damaging to the finish.
- **Remove the inner glass by unfastening the knurl-edged screws after every cooking cycle, these can easily be removed either by hand or tool. Clean the glass with warm soapy water and re-assemble once the glass is dry.**
- You may hand wash the removable parts. A dishwasher may cause the surface to deteriorate, however, this will not affect the operation of the appliance.
- Let parts dry completely before reassembling.
- This appliance is for household use only and is not user-serviceable.
- Do not open or change any parts by yourself. Please refer to a qualified electrician or return to the supplier if servicing is necessary.

STORING THE APPLIANCE

- Unplug the unit from the power socket and clean all the parts as instructed above.
- Ensure that all parts are dry before storing.
- Store the appliance in its box or in a clean, dry place.
- Never store the appliance while it is still wet or dirty.
- Never wrap the power cord around the appliance.

SERVICING THE APPLIANCE

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly.
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

If the appliance still does not work after checking the above:

Consult the retailer for possible repair or replacement. If the retailer fails to resolve the problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- A reason is provided for why it is being returned.

 
If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved Home of Living Brands (Pty) Limited service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.

CHANGING THE PLUG


Should the need arise to change the fitted plug, follow the instructions below.

This unit is designed to operate on the stated current only. Connecting to other power sources may damage the appliance.

WARNING: If your appliance has three wires (Green/Yellow, Blue, Brown) then it **MUST** be earthed. Connect a three pin plug as shown below

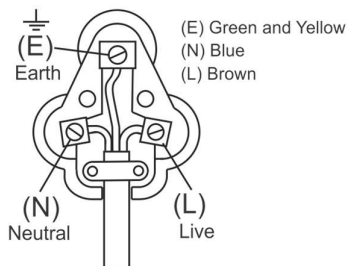

 If your appliance has only two wires (Blue, Brown) then it does not need to be earthed. Connect a three pin plug as shown below

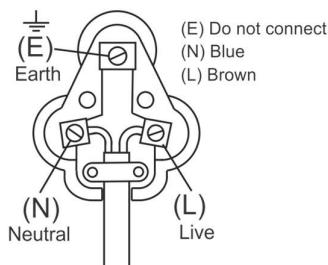

PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE
IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.

1 YEAR STANDARD WARRANTY

Warranty will be extended for another year if you register your product online within 12 months of purchase (visit <https://russellhobbswarranty.co.za/>)

W A R R A N T Y AND EXTENDED WARRANTY

1. Home of Living Brands (Pty) Limited ("Home of Living Brands") warrants to the original purchaser of this product ("the customer") that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase ("warranty period").
2. Home of Living Brands shall extend the warranty period for a further period of 1(one) year ("extended warranty period"), on condition that the purchaser registers the product on the website, within 12 months from the date of purchase of the product. The website address for registration is as follows: <https://russellhobbswarranty.co.za/>.
3. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product ("the supplier") thereof within the warranty period or if applicable, the extended warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.
4. The faulty product must be taken to the supplier's service centre to exercise the warranty.
5. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where (a) the customer is not the cause of the product breaking, and (b) the product has been used for the intended purpose stipulated in the product manual. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorised modification or repair of the product.
6. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer. In this regard any accessories supplied with the product by the supplier, may be excluded in this warranty or extended warranty (see Exclusions to Warranty and Extended Warranty document).
7. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3 (three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer, subject to the supplier's discretion.
8. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.

HOME OF LIVING BRANDS (PTY) LTD (JOHANNESBURG)

NATIONAL CONTACT

TEL NO. (087) 245-0029

www.russellhobbs.co.za
www.facebook.com/RussellHobbsSA

EXCLUSIONS TO WARRANTY AND EXTENDED WARRANTY

1. Any accessories supplied with the product, including but not limited to, bowls, jugs, mills or carafes made either of glass or plastic and supplied with this appliance (hereinafter referred to as "the accessory or accessories"), is warranted to be free from material and workmanship defects for the duration of the appliance warranty.
2. The accessories should give trouble free service when used in accordance with the directions described in the instruction manual. However, the accessories will be damaged if subjected to impact, and this damage is not covered by the warranty. Such impact damage can occur either from the outside (if for example it is dropped or knocked against a hard surface), or from within (if for example foreign objects are placed within the accessories and the power is switched on).
3. Should you need to replace an accessory during the warranty period; a claim for a free replacement will only be considered if the item (including all shards and broken parts) is returned to the nearest HOLB service centre for examination.
4. The remains of the accessory will be carefully examined by the relevant professionals and if it is determined (at the sole discretion of HOLB) that the damage was caused by impact, then the claim will be refused and will not be covered by the warranty or any extended warranty.
5. Any replacement part provided in terms of clause 4 above will become a chargeable item payable by the customer.

