



Russell Hobbs

INSTRUCTION AND WARRANTY



MODEL NO. RH1262-26

RUSSELL HOBBS ONE TEMP PRECISION IRON

1-year standard warranty

Warranty will be extended another year if you register
your product online within 12 months of purchase
(visit <https://russellhobbswarranty.co.za/>)



Congratulations on purchasing your Russell Hobbs One Temp Precision Iron. Each unit has been manufactured to ensure safety, reliability, and ease of use. Before use, please read these instructions carefully and keep them for further reference.

FEATURES OF THE RUSSELL HOBBS STEAMPRO IRON

- 2600W
- One Temp NTC Technology, no temperature setting required
- Ceramic soleplate
- Steam & Dry iron
- Powerful burst of steam
- Variable steam control
- Vertical steam
- Anti drip
- Self clean & Anti Calc
- Auto shut off
- Overheat safety protection
- Convenient 1.9m swivel cord
- Water tank capacity: 350ml
- Includes water measuring cup
- With indicator light and heel rest
- For domestic use only
- 1-year standard warranty. Warranty will be extended for another year if you register your product online within 12 months of purchase (visit <https://russellhobbswarranty.co.za/>)

IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed including the following:

1. Please read the instructions carefully before using any appliance.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
3. Incorrect operation and improper use can damage the appliance and cause injury to the user.
4. The appliance is intended for household use only. Commercial use invalids the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
5. Avoid any contact with moving parts.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance.
8. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid an electrical hazard.
9. Do not use the appliance if it leaks, has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorized service agent

 
10. To reduce the risk of electric shock, do not immerse or expose the motor/ electrical assembly, plug or the power cord to water or any other liquid.
11. Never immerse the unit in water or any other liquid for cleaning purposes.
12. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
13. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
14. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
15. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
16. Do not allow the cord to touch hot surfaces and do not place on or near flammable goods, near an open flame, hot gas or electric burner or a heated oven.
17. Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.

18. This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
19. DO NOT carry the appliance by the power cord.
20. Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
21. Ensure that the switch is in the "0" or "OFF" position after each use.
22. Don't iron clothing while it's being worn – you'll burn or scald the wearer.
23. Don't touch the soleplate and keep away from the steam emitting from it.
24. Take care when emptying the iron – it may contain hot water.
25. Don't use the iron in the vicinity of children.
26. Use the iron on a stable, level, heat-resistant surface, preferably an ironing board.
27. Don't leave the iron unattended while plugged in, or while it's standing on the ironing board. It could be knocked over by you, by a child or by a pet.
28. Don't fill the iron directly from the tap, use the water beaker provided.
29. Don't fill past the MAX level mark shown on the water tank or water leak from the iron during use.
30. Deposits or minerals in the water supply will generate scale and block the steam holes in the soleplate. It is advisable to use distilled water when filling your iron. Do not use chemically distilled water.
31. Leave the iron upright to cool down fully before cleaning and storing away.
32. Don't use the iron for any purpose other than those described in these instructions.

33. Take care not to scratch the soleplate – avoid buttons, zips, etc.
34. When placing the iron on its heel rest, ensure that the surface on which it has been placed is clean and stable.
35. The iron has a protective thermal fuse, which will blow if it overheats. If this happens, the iron will stop working and must be returned for repair.
36. Always unwind and straighten the power cord before use.
37. Unplug the iron from the mains electrical supply before:
 - Cleaning
 - Filling with water or emptying the water tank
 - Immediately after use
 - When not in use
 - When moving
38. The appliance generates high temperature steam. Always handle with care and warn other users of potential danger.
39. Don't let the power cord touch the soleplate as it may result in damage as well as a potential fire hazard.
40. Empty the water tank after each use.
41. Do not add perfume, vinegar or other chemical liquids into the water tank as they may result in damage to the appliance.
42. Do not operate this appliance by means of an external timer.
43. Wait until the pilot light cycles at least twice or wait for at least 2 minutes for the temperature to stabilize before ironing.
44. The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorized personnel.

45. In case of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorized service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above-mentioned pre-cautions and instructions, could affect the safe operation of this appliance.

PARTS DESCRIPTION:

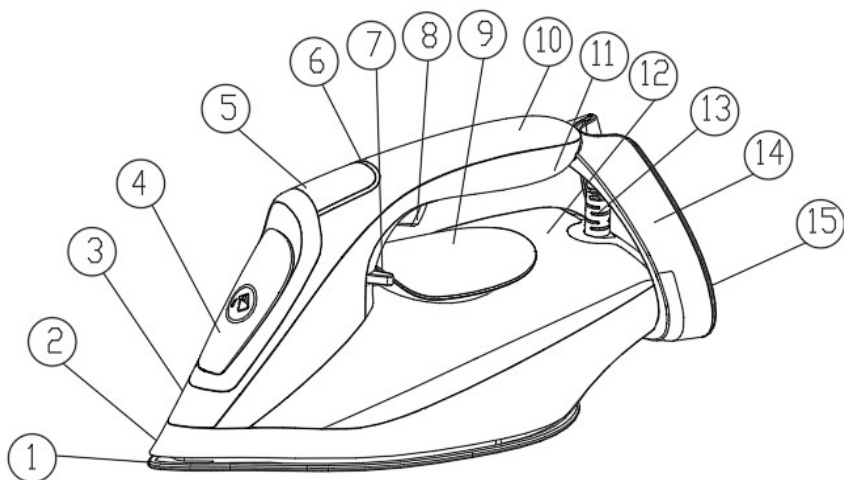

1	Soleplate	6	Lamp cover	11	Handle
2	Skirt	7	Steam lever	12	Water tank
3	Front Cover	8	Steam burst button	13	Cord
4	Water inlet	9	Water tank cover	14	Rear cover plate
5	Top cover plate	10	Handle	15	Rear cover

OPERATING INSTRUCTIONS

BEFORE FIRST USE

Remove any protective films or stickers from the soleplate and the Iron's body. Wipe the soleplate with a dry soft cloth. Unwind and straighten the power cord. Fill the iron as described in the section "**How to Fill the Water Tank**". Connect the appliance to a suitable mains power supply outlet. The light will glow blue to indicate the iron is heating up. Once the light turns red, then the required temperature is reached. Move the steam knob to the **ON** position - steam starts to come out from the vents on the soleplate. Begin first time ironing with an old towel. When the water tank is empty and there is no more steam that can be produced; the preparation work is completed. The iron is now ready for proper use.

Note: It is normal for small amount of smoke to be produced the first time you use the iron, this will quickly disappear. When using the steam function for the first time, do not direct the steam towards the laundry, as there could be debris from the steam vents.

HINTS AND TIPS FOR IRONING

The One Temp NTC Technology enables you to iron all types of ironable fabrics, in any order, without the need to adjust any temperature settings. Fabrics with these symbols (figure 1) are ironable, for example linen, cotton, polyester, silk, wool, viscose and rayon.



Fabrics with this symbol are not ironable (figure 2). These fabrics include synthetic fabrics such as Spandex or elastane, Spandex-mixed fabrics and polyolefins (e.g. polypropylene), as well as prints on garments. Do not iron non-ironable fabrics.



READ THE GARMENT LABELS AND FOLLOW THE MANUFACTURER'S IRONING INSTRUCTIONS.

HOW TO FILL THE WATER TANK

1. Disconnect the appliance from main power supply outlet.
2. Open the water inlet cover.
3. Place the iron on its heel rest and tilt forward approximately at a 45-degree angle.
4. Fill water through the water-filling inlet hole up to the MAX level mark indicated on the side of the iron/ water tank. Never fill above this mark.
5. Close the water inlet cover and wipe off any spillages on Iron.

Note: For the best result, it is advisable to use de-mineralized water or distilled water. Do not use chemically de-scaled water or any other liquids.

DRY IRONING

This function irons without the use of steam.

1. Connect the iron with a suitable mains power supply outlet.
2. Set the steam lever to position “0”/ “no steam”/  (far left)
3. The pilot light will glow blue to indicate that the iron is heating up.
4. When the required temperature is reached, the pilot light turns red.
5. The iron is ready to use.
6. After use, disconnect the iron from mains power supply outlet.
7. Follow cleaning and maintenance instructions.

STEAM IRONING

1. Fill the iron as described in "**How to Fill the Water Tank**".
2. Connect the iron to a suitable mains power supply outlet.
3. The pilot light will glow blue to indicate that the iron is heating up.
4. When the required temperature is reached, the pilot light turns red.
5. The iron is ready for use.
6. Set the steam lever correctly. Increase steam output by pushing the steam lever to the right and decrease steam output by pushing the steam lever to the left. The steam rate can be adjusted according to your requirements, however for the best results and shortest ironing time, we strongly recommend that you iron all ironable fabrics at the maximum steam output setting.

Caution: Synthetic fabric, Nylon, Synthetic Silk and Silk cannot be steam ironed as it will damage the finish of the fabric.

7. After use, disconnect the iron from mains power supply outlet.
8. Follow the cleaning and maintenance instructions.

 
BURST OF STEAM

This function works well for tough wrinkles and heavy fabrics. By pressing the steam button, an intense burst of steam is emitted from the soleplate. This can be very useful when removing stubborn creases. This function can be used only while ironing with a high ironing temperature.

For optimal results, there should be a five (5) second interval between presses of the steam button. To prevent leaking water from the soleplate, do not press the steam button continuously for more than five (5) seconds. Allow at least a one (1) minute interval before pressing the steam button again.

BURST OF STEAM IN VERTICAL POSITION

Burst of steam can also be applied when holding the iron in a vertical position. This function is useful for removing wrinkles on garments in hanging position, hanging curtains, or other hanging fabrics.

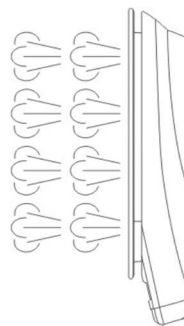

Note: It may be necessary to press the burst of steam button few times to start this function. During the use of 'Burst of Steam', stop ironing when the pilot light turns on and then start ironing again only after the pilot light has turned off.

Warning: *Do not apply steam on any clothes or fabrics that are being worn by human or pets. The temperature of the steam is very high and will burn or scald.*

SELF-CLEANING

This function removes the scale and minerals built up in the Steam Chamber. The iron will remain in the best condition if this function is performed once every two weeks. You may choose to use the function more frequently depending on the hardness of the water used or water available in your local area.

- Make sure that the appliance is unplugged from the mains supply outlet.
- Set the steam lever to the “0”/ “no steam” /  position.
- Fill the iron as described in “**How to Fill the Water Tank**” and fill the water tank up to the **MAX** position. Do not put vinegar or other descaling agents in the water tank.
- Place the iron on a stable surface in an upright standing position.
- Connect the iron to mains supply outlet.
- The pilot light will glow blue to indicate that the iron is heating up.
- When the required temperature is reached, the pilot light turns red
- Disconnect the iron from mains power supply outlet.
- Hold the iron horizontally over a sink.
- Set the steam lever to the self clean function by pushing the lever to the far right. Hold in and shake the iron to and fro.
- Steam and boiling hot water will emit from the holes on the soleplate which contains impurities, scale, minerals and flakes (if any) that deposited in the Steam Chamber from previous use.
- Release the self-cleaning lever as soon as all the water in the tank has been used up.
- Repeat the self-cleaning process if the iron still contains a lot of

impurities.

- After the self-cleaning process, put the plug into the wall socket, and let the iron heat up to allow the soleplate to dry.
- Once the pilot light glows red unplug the iron and move the hot iron over a piece of used cloth to remove any water stains that may have formed on the soleplate.
- Let the iron cool down before you follow storage instructions.

Caution: Keep skin/body away from the hot water.

Note: Products returned under warranty with faults due to scale will be subject to a repair charge.

AUTO SHUT OFF

The One Temp Precision Iron will automatically turn off if left unattended in a vertical position for 8 minutes, if left 30 seconds in a horizontal position or if the iron falls to either the left or right side and left for 30 seconds.

CLEANING AND MAINTENANCE

- Regularly rinse the water tank with water. Empty the water tank after you have rinsed it.
- After using, lift the iron with the water inlet filling hole downwards to empty the remaining water from the water tank into the sink.
- Insert the plug into the socket, set the steam slider on and let the remaining water in the water tank evaporate as well as let the soleplate dry. Once done, ensure that the steam slider is set to the **“0”/ “no steam”/ “OFF”** position.

- Unplug the iron and let it cool down before cleaning or storing it. Always remember to unplug the unit from the electrical outlet when not in use and before cleaning.
- Wipe the soleplate with a damp cloth and a non-abrasive (liquid) cleaner. Once done, buff the soleplate with a clean dry cloth.
- If fiber has adhered/ stuck to the soleplate, use a slightly dampened cloth to wipe the fiber from the soleplate.
- If scale has blocked a steam hole, please remove it gently using a toothpick. Be careful not to damage the surface of the soleplate
- The body of the appliance should be cleaned with a damp cloth. Do not let water enter the appliance and cause damage to any electrical components.
- Do not use bleach or other abrasive substance or solvents to clean your appliance as it can be damaging to the finish.
- Do not immerse the appliance in water or any other liquid, or hold it under a running tap to clean.
- This appliance is for household use only and is not user-serviceable.
- Do not open or change any parts by yourself. Please refer to a qualified electrical service department or return to the supplier if servicing is necessary.

Note: Never use sharp or rough objects to remove deposits from the soleplate. Never use any abrasive or descaling agents to clean the iron.

STORING THE APPLIANCE

- Complete Cleaning and Maintenance as instructed above.
- Ensure that the steam knob is set to the “0”/ “no steam”/ “OFF” position.
- Ensure that all parts are dry before storing.
- The cord can be wrapped around the heel of your iron for storing. Use the clip to secure the last section of cord as shown.
- Store only once the iron has cooled completely.
- Store the appliance vertically in its box or in a clean, dry place.
- Never store the appliance while it is still wet or dirty.
- Never wrap the power cord around the appliance

TROUBLE-SHOOTING

Problem	Possible Reasons	Solution
Not enough heat	The pilot light has not turned red to indicate the ideal temperature has been reached The iron is unplugged	Wait until the pilot light turns red Check if the iron is plugged in to the mains power supply
No steam is being produced or leakage.	The pilot light has not turned red and the iron is still heating up The water tank is empty Possible faulty anti drip mechanism	Wait until the pilot light turns red Fill the water tank to the MAX position. Return the product to an authorized service centre for evaluation.
No burst of steam or no vertical steam.	The (vertical) burst of steam function has been used too often within a very short period. The iron is not hot enough.	Continue ironing in a horizontal position and wait a few minutes before using the (vertical) burst of steam function again.

Leaking water from soleplate.	There is still not enough heat being produced. The water is over the max position.	Use the steam button only after the indicator light has turned red Pour out the remaining water.
Little Steam	Check if the steam knob is in the correct position. A steam hole is blocked. Too little water in the water tank.	Set the steam knob to the correct position. Clean the steam hole with distilled water. Fill water into the tank as per earlier instructions.

SERVICING THE APPLIANCE

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly.
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

If the appliance still does not work after checking the above:

 
Consult the retailer for possible repair or replacement. If the retailer fails to resolve the problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- A reason is provided for why it is being returned.
- If the supply cord is damaged, it must be replaced by the manufacturer or an authorized service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved Home of Living Brands (Pty) Limited service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.


CHANGING THE PLUG

Should the need arise to change the fitted plug, follow the instructions below. This unit is designed to operate on the stated current only. Connecting to other power sources may damage the appliance.

WARNING: If your appliance has three wires (Green/Yellow, Blue, Brown) then it **MUST** be earthed. Connect a three pin plug as shown below

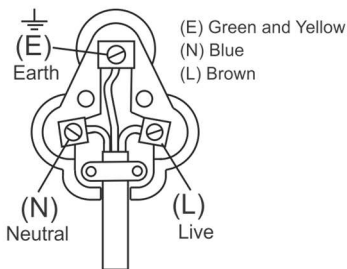

 If your appliance has only two wires (Blue, Brown) then it does not need to be earthed. Connect a three pin plug as shown below

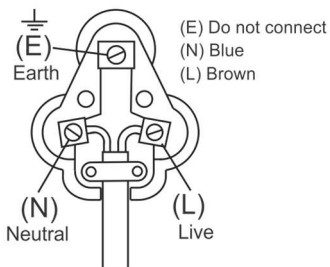

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE
IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE
PRODUCED.**

1 YEAR STANDARD WARRANTY

Warranty will be extended for another year if you register your product online within 12 months of purchase (visit <https://russellhobbswarranty.co.za/>)

W A R R A N T Y AND EXTENDED WARRANTY

1. Home of Living Brands (Pty) Limited ("Home of Living Brands") warrants to the original purchaser of this product ("the customer") that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase ("warranty period").
2. Home of Living Brands shall extend the warranty period for a further period of 1(one) year ("extended warranty period"), on condition that the purchaser registers the product on the website, within 12 months from the date of purchase of the product. The website address for registration is as follows: <https://russellhobbswarranty.co.za/>.
3. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product ("the supplier") thereof within the warranty period or if applicable, the extended warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.
4. The faulty product must be taken to the supplier's service centre to exercise the warranty.
5. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where (a) the customer is not the cause of the product breaking, and (b) the product has been used for the intended purpose stipulated in the product manual. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorized modification or repair of the product.
6. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer. In this regard any accessories supplied with the product by the supplier, may be excluded in this warranty or extended warranty (see Exclusions to Warranty and Extended Warranty document).
7. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3 (three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer, subject to the supplier's discretion.
8. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.

HOME OF LIVING BRANDS (PTY) LTD (JOHANNESBURG)

NATIONAL CONTACT:

TEL NO. (087) 245-0029

www.homeoflivingbrands.com

www.russellhobbs.co.za

www.facebook.com/RussellHobbsSA

EXCLUSIONS TO WARRANTY AND EXTENDED WARRANTY

1. Any accessories supplied with the product, including but not limited to, bowls, jugs, mills or carafes made either of glass or plastic and supplied with this appliance (hereinafter referred to as “the accessory or accessories”), is warranted to be free from material and workmanship defects for the duration of the appliance warranty.
2. The accessories should give trouble free service when used in accordance with the directions described in the instruction manual. However, the accessories will be damaged if subjected to impact, and this damage is not covered by the warranty. Such impact damage can occur either from the outside (if for example it is dropped or knocked against a hard surface), or from within (if for example foreign objects are placed within the accessories and the power is switched on).
3. Should you need to replace an accessory during the warranty period, a claim for a free replacement will only be considered if the item (including all shards and broken parts) is returned to the nearest HOLB service centre for examination.
4. The remains of the accessory will be carefully examined by the relevant professionals and if it is determined (at the sole discretion of HOLB) that the damage was caused by impact, then the claim will be refused and will not be covered by the warranty or any extended warranty.
5. Any replacement part provided in terms of clause 4 above will become a chargeable item payable by the customer.