

PROBLEMS

water level — If the machine isn't filled to min. The light will flash, but nothing else will happen. Switch off, fill up, prime the pump, and try again.

drip tray — Keep an eye on it. At 140ml, it's unlikely to overflow, but it's easier to empty half full than full.

fresh pods — Don't use a pod twice. It really won't taste nice. Use a fresh pod for every brew.

airlocks — Unplug, fill the tank, plug in, prime the pump, and start again.

milk — If you take milk, use warm or hot milk. Your brew must be cool enough not to scald, but hot enough for the flavour to fill the mouth, sinuses and nose.

 
bottled water — If you use bottled water, check it has no added ingredients. Don't use sparkling water. The gas that gives the sparkle will affect the flavour.


DESCALING

Scale build-up will overheat the element, reducing its working life, it'll lengthen the brewing time, and it may make the safety cut-out operate prematurely, switching off before the water boils.

To minimise scale build-up, empty it after use, and descale regularly. Use a proprietary brand of descaler suitable for use in plastic-bodied products, and follow the instructions on the package of descaler. After descaling, run it twice with water, but no pod.

CONNECTION TO THE ELECTRICITY SUPPLY

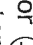This product must be earthed. To replace the fuse, use a 13A BS1362 compliant fuse. To replace the plug, use a 13A BS1363 compliant plug. Fit the green/yellow Earth wire to the terminal marked E or , the blue Neutral wire to the terminal marked N, and the brown Live wire to the terminal marked L. Fit the cord grip. If in doubt, call an electrician.

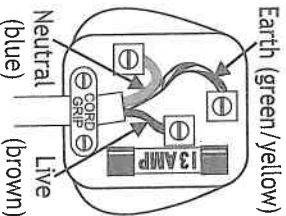

If the plug supplied is non-rewireable (moulded), don't use it without the fuse cover in place. If you remove it, dispose of it, don't re-use it or put it in a socket.

Spare parts

Phone Customer Service Dept on 0845 658 9700 (local rate number) or email service@saltoneuropa.com.

Quote the Model No. on the rating label. They'll give you the price(s). You can order spares on the phone using VISA or MASTERCARD, or you can fill in this form (or a copy), and send it, with a cheque or P.O. payable to Salton Europe Ltd, to Customer Service Dept.

Name:

Address:

.....

Postcode: Model No.

Part(s) required	Quantity

I enclose £ in full payment.

For more pods, visit www.unounopods.com

AFTER SALES SERVICE

The product isn't user-serviceable. If it's not working, check you've followed the instructions; check the plug fuse and main fuse/circuit breaker. If it still doesn't work, consult the retailer. If the retailer fails to solve your problem, and you need to return it to us:

Pack it carefully, with a note of your name, address, daytime phone, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (eg till receipt). Send it to Customer Service. They'll give you an estimate for inspection/repair.

GUARANTEE

Any defect affecting product functionality that becomes apparent within one year of purchase will be corrected by free repair or replacement provided the product has been used and maintained in accordance with the instructions and has not been abused or misused. Your statutory rights are not affected.

In line with our continuous product development policy, we reserve the right to change product, packaging and documentation specifications without notice.

Customer Service Dept (service@saltoneuropa.com)

Salton Europe Ltd

Falsworth, Manchester M35 0HS England

www.unounopods.com

436-535

Phone 0845 658 9700 (local rate number)

MOMO

by Russell Hobbs

POD BREWING SYSTEM

instructions
& guarantee



Read the instructions and keep them safe. Pass them on if you pass the machine on. Remove all packaging, but keep it till you're satisfied the machine is working.

important safeguards

Follow basic safety precautions, including:

1. Don't put the machine in water, don't use it in a bathroom, near water, or outdoors.
2. The machine should only be used by or under the supervision of a responsible adult.
3. Store and use the machine out of reach of children.
4. Sit the machine on a stable, level, heat-resistant surface, near a power socket.
5. Route the cable so it doesn't overhang and can't be tripped over or caught accidentally.
6. Unplug the machine when not in use, before moving or cleaning. Let it cool before moving or cleaning.
7. To stop brewing, press and release the **O** button.
8. Keep the machine and cable clear of heat sources.
9. Use the machine only for brewing from Java pods™.
10. Don't use accessories other than those we provide.
11. Don't use a damaged or malfunctioning machine.
12. If the cable or plug is damaged, the machine must be returned in order to avoid hazard.

household use only

before using for the first time

Without using a pod, run two big cups of water through the machine, then switch off, unplug, and clean it.

position

1. Sit the machine on a stable, level, heat-resistant surface, near a power socket. Don't plug it in yet.
- #### water fill
2. Ease the top of the tank away from the body, then lift the tank straight up and off the machine.
 3. Flip the lid up and fill the tank with cold water.
 4. Fill at least to **min**, or it won't work, but don't fill above **max**, or you'll spill.
 5. Flip the lid back, to close it.
 6. Replace the tank so the valve in the tank mates with the valve in the rear of the machine.
 7. Push the top of the tank into the machine.

prime the machine

8. Check the lid is closed, and the latch is pushed in.
9. Put a cup under the spout to catch the water.
10. Plug the machine into the power socket, and switch



11. Press and release the **O** button — ignore the light.
12. Press and release both buttons **P** together.
13. After half a cup of water, press and release the **O** button to switch off, and discard the water.
14. You need to do this before your first brew of the day, and again if you suffer from an airlock.

load a pod

15. To avoid damage, use only Java pods™. For more pods, visit www.unnoppods.com

16. Pull the latch forward — the lid will rise.

17. Rotate the lid up and back about 45 degrees.

18. Put a pod in the pod holder, and press it gently down, so nothing's left above the rim of the pod holder.

nb If you don't, the frill can jam the seal, spilling coffee or bypassing the pod — messy and wasteful.

19. Swing the lid down till it's horizontal, press it down on to the body, and push the latch in to lock it shut.

warm it up

20. Press and release the **O** button. The light in the button will flash. When it stops flashing and stays on, it's ready. This takes about 2 minutes from cold.

brewing

21. Put a cup of the appropriate size under the spout.

O The small cup button dispenses about 135ml (just under quarter of a pint) of strong brew.

P The big cup button dispenses about 220ml (just over half as much again) of a milder brew.

P Press and release **O** or **P**.

22. Press and release **O** or **P**.
23. Your brew is dispensed in two stages. Wait till the spout stops dripping before removing the cup.

finished?

24. Press and release the **O** button, unplug the machine, let it cool down, then clean it.

more?

25. Check the tank and top up as necessary.
26. When you remove the tank, the valves in the tank and the machine will close.
27. If you leave the machine, it'll switch itself off after about an hour. Press and release the **O** button to switch it on again.

caution

When you open the lid, steam may escape, so keep your fingers clear. Avoid touching metal parts, as they'll be hot, too.

28. Pull the latch forward, open the lid, and lift out the

29. Put the spout into a cup to carry it to the sink.
30. Lift out the pod holder and tip the pod into the bin.
31. Rinse the spout and pod holder under the tap.
32. Replace the pod holder in the top of the spout.
33. Keep your hand under the spout while you carry it back to the machine, so it doesn't drip on the floor.
34. Slip the spout back into the machine.
35. Go back to step 18.

care and maintenance

1. Switch off, unplug, and let the machine cool down.
2. Open the lid, and remove the spout and holder.
3. Turn the spout over, gently press the tab in the centre, and pull the top and bottom apart.
4. Remove the tank.
5. Lift off the drip tray cover and remove the drip tray.
6. Wash the parts you've removed in warm soapy water, rinse, and let them drain dry.
7. Don't dry the inside of the tank with a cloth. Any lint left in the tank may clog the machine.
8. Wipe the outside surfaces with a damp cloth. Don't wash any part of the machine in a dishwasher. Don't put the machine in water or any other liquid. Don't use harsh or abrasive cleaners or solvents.

