 




Russell Hobbs



instructions

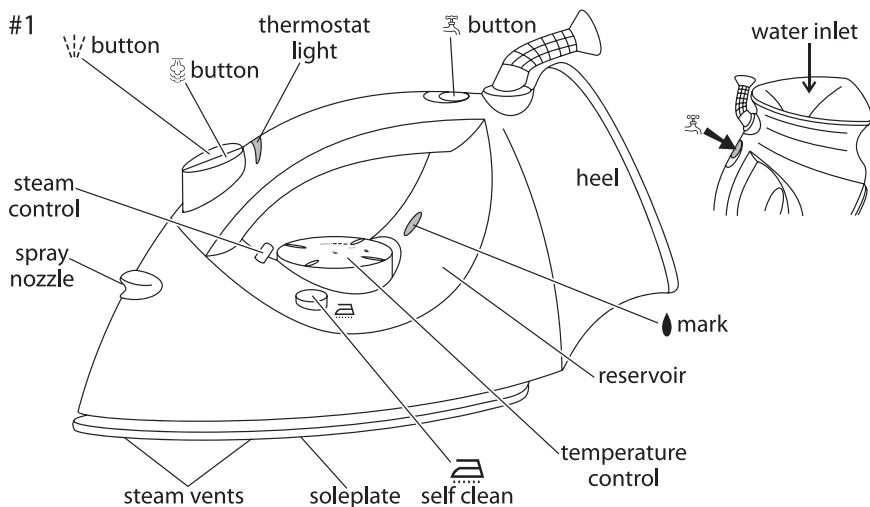

Read the instructions and keep them safe. If you pass the iron on, pass on the instructions too. Remove all packaging, but keep it till you know the iron works.

important safeguards

Follow basic safety precautions, including:



- 1 This iron must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the iron in liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 4 Don't iron clothing while it's being worn – you'll burn or scald the wearer (this is not a joke – I've seen it happen).
- 5 Don't touch the soleplate, and keep away from the steam coming from it.
- 6 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 7 Children should be supervised to ensure that they do not play with the appliance.
- 8 Use the iron on a stable, level, heat-resistant surface, preferably an ironing board.
- 9 Don't leave the iron unattended while plugged in, or while it's standing on the ironing board. It could be knocked over by you, by a child, or by a pet.
- 10 Unplug the iron before filling, before cleaning, and after use.
- 11 Sit the iron upright when you're not ironing, and when you store it away.
- 12 Leave the iron upright to cool before cleaning.
- 13 Unplug the iron when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 14 Don't fit any attachment or accessory other than those we supply.
- 15 Keep the iron and the cable away from hotplates, hobs or burners.
- 16 Don't use the iron for any purpose other than those described in these instructions.
- 17 Take care not to scratch the soleplate – avoid buttons, zips, etc.






 

 

- 18 The iron has a protective thermal fuse, which will blow if it overheats. If this happens, the iron will stop working, and must be returned for repair.
- 19 Don't use the iron if it's dropped or damaged, or if it malfunctions or leaks.
- 20 If the cable is damaged, return the iron, to avoid hazard.

household use only



 
before using for the first time


- Don't worry if the iron smokes a bit at first, it'll stop as the element cures.
- Iron an old piece of cotton fabric, to clean the soleplate.
- Press the  button 3 or 4 times, to check it out.
- Press the  button 3 or 4 times, to check it out.

preparation



- 1 Check for textile care symbols (   .
- 2 Iron fabrics needing low temperatures  first, then those that need medium temperatures , and finish with those needing high temperatures /max.

filling

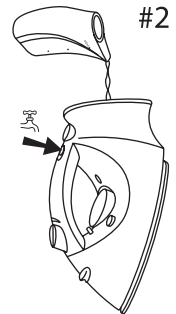 - 3 You may use the iron with tap-water, but if you live in a hard water area, you should use distilled water (not chemically descaled or softened water).
- 4 If you buy distilled water, check that it's marketed as suitable for use in irons.
- 5 Unplug the iron.
- 6 Move the steam control to .
- 7 Hold the iron with the heel uppermost.
- 8 Press the  button in fully, and hold it in – this opens the filling valve.
- 9 Pour water into the heel till it stops disappearing into the reservoir, and starts to back up.
- 10 Let the  button go, to close the valve and seal the reservoir.
- 11 Tip any excess water out of the heel, into the sink or the filling jug.
- 12 Wipe up any spillage.







switch on

- 13 Turn the temperature control to .
- 14 Sit the iron on its heel.
- 15 Put the plug into the power socket (switch the socket on, if it's switchable).
- 16 The heel and reservoir will glow, to show that the iron is connected to the electricity supply.
- 17 Turn the temperature control to bring the setting you want next to the  mark (#3).
- 18 The thermostat light will come on.
- 19 When the iron reaches the temperature you set, the thermostat light will go out. It'll then cycle on and off as the thermostat operates to maintain the temperature.

temperature setting guide

 
 
label marking

-  cool – nylon, acrylics, polyester
-  warm – wool, polyester mixtures
-  hot – cotton, linen/jeans, denim
-  do not iron

temperature dot setting

- 
- 
- /max

✱ If the instructions on the fabric label differ from this guide, follow those on the label.

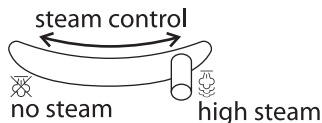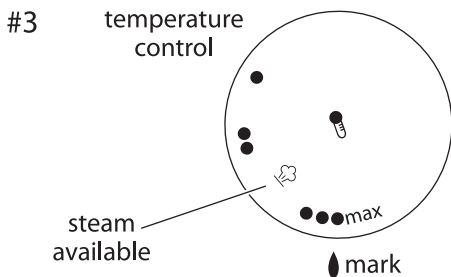

reducing temperature

 
20 Reducing the temperature takes a bit longer, as the element has to lose the heat it has built up, so be patient. It's best to organise your ironing so that you don't need to reduce the temperature ("preparation" page 3, point 2).

steam ironing

- 21 When steam ironing, you must set the temperature control to ☹ or higher.
 22 If you don't, you'll get water on your clothes, not steam.
 23 Move the steam control to the setting you want, ☹ = no steam, ☺ = high steam (#3).
 24 Wait till the thermostat light goes out, then start ironing.


spray

- ★ Water spotting affects some fabrics. Test this out on a hidden part of the fabric.
 25 This works with dry or steam ironing, as long as there's water in the reservoir.
 26 Check that there's water in the reservoir.
 27 Lift the iron off the fabric.
 28 Aim the spray nozzle at the fabric.
 29 Press the ☹ button.
 30 You may have to press it 2 or 3 times to pump water through the system.

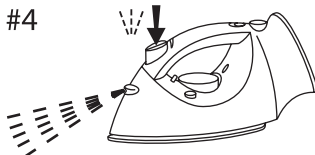

shot of steam

 
- 31 This works with dry or steam ironing, as long as there's water in the reservoir, and the temperature is above ☹.
 32 Check that there's water in the reservoir.
 33 Check that the temperature control is at ☹ or higher.
 34 Lift the iron off the fabric.
 35 Press the ☺ button.
 36 You may have to press it 2 or 3 times to pump water through the system.
 37 Leave 4 seconds between shots, to let the temperature build up.

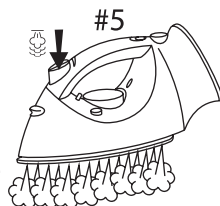


dry ironing


- ★ If you're going to be dry ironing for 15 minutes or more, empty the reservoir first, to avoid spontaneous bursts of steam.
 38 Move the steam control to ☹.
 39 Wait till the thermostat light goes out, then start ironing.

vertical steaming

 
- 40 Remove wrinkles from hanging clothes, hanging curtains, and furnishing fabrics.
- 41 Check that there's adequate ventilation behind the fabric, otherwise moisture may build up, causing mildew.
- 42 Check that there's nothing behind the fabric that may be damaged by the steam.
- 43 Check that pockets, turn-ups, and cuffs are empty.
- 44 Check that there's water in the reservoir.
- 45 Turn the temperature control to **max**, move the steam control to ☒.
- 46 Hold the iron close to (but not touching) the fabric.
- 47 Press the  button (you're using the "shot of steam" function vertically).
- 48 You may have to press it 2 or 3 times to pump water through the system.
- 49 Leave 4 seconds between shots, to let the temperature build up.

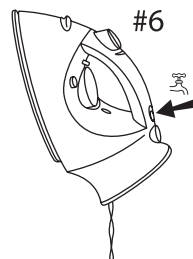


after use

- 50 Turn the temperature control to ●, move the steam control to ☒.
- 51 Unplug the iron.
- 52 Press the  button in fully, and hold it in, to open the filling valve.
- 53 Empty the reservoir, via the heel, into the sink or the filling jug.

 
caution the water may be hot




- 54 Let the  button go, to close the valve and seal the reservoir.
- 55 Sit the iron on its heel.
- 56 Leave it to cool down completely.
- 57 When it's cold, wipe off any moisture, and close the water inlet cover.
- 58 Store the iron on its heel, to avoid corrosion and damage to the soleplate.

self clean

- 59 To prevent scale building up, use the self clean function regularly, at least monthly in normal water areas, more often in hard water areas.
- 60 You'll need a basin or a large bowl to catch the water coming out of the soleplate.
- 61 Fill the reservoir.
- 62 Turn the temperature control to **max**, move the steam control to ☒.
- 63 Sit the iron on its heel.
- 64 Put the plug into the power socket.
- 65 When the thermostat light goes out, unplug the iron.
- 66 Now hold the iron over the basin or bowl, with the soleplate down.
- 67 Press the  button in, hold it in, and gently move the iron to and fro, over the basin or bowl.

caution keep clear of the escaping water and steam

   - 68 Water and steam will wash scale and dust through the soleplate, and into the sink.
- 69 When the reservoir is empty, release the  button.

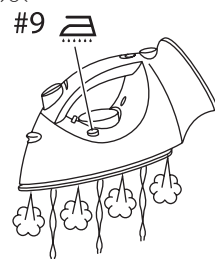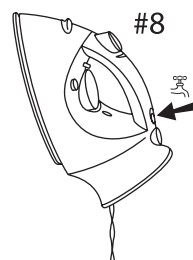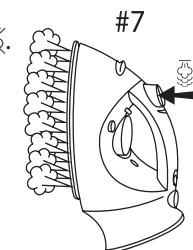

70 Sit the iron on its heel to cool.

71 When it's cold, wipe off any moisture, and wind the cable round the heel.

72 Store the iron on its heel, to avoid corrosion and damage to the soleplate.

anti-scale

73 The anti-scale agent incorporated in the iron helps prevent the build-up of scale.

74 Don't use a descaling solution, or you'll destroy the anti-scale agent.

cleaning

75 Unplug the iron when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.

76 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.

77 Remove spots from the soleplate with a little vinegar.

78 Take care not to scratch the soleplate.

 
79 Don't put the iron in water or any other liquid.

80 Don't use harsh or abrasive cleaning agents or solvents.

Should the need arise to change the fitted plug, follow the instructions below.
Please note, connecting to other power sources may damage the appliance.
Connect a three-pin plug as follows:

The wires in this mains lead are coloured in accordance with the following code:

- Green/Yellow = Earth
- Blue = Neutral
- Brown = Live

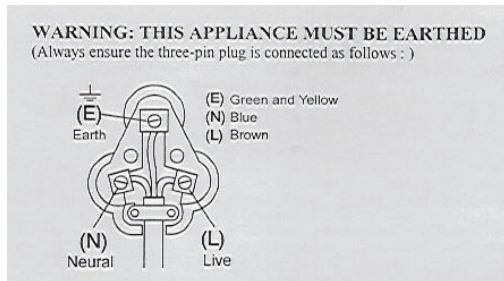

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE
IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.**

WARRANTY

1. Tedex Trading (Pty) Limited ("Tedex") warrants to the original purchaser of this product ("the customer") that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase ("warranty period").
2. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product ("the supplier") thereof within the warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.
3. The faulty product must be taken to the supplier's service centre to exercise the warranty.
4. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where the customer has not broken the product himself, or used the product for something that it is not supposed to be used for. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorised modification or repair of the product.
5. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer.
6. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3 (three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer.
7. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.

TEDELEX TRADING (PTY) LTD

www.amap.co.za
011 490-9000 (Jhb)
031 792-6000 (Dbn)
021 535-0600 (CT)