




Russell Hobbs



Bedienungsanleitung 2
instructions 10

mode d'emploi 6

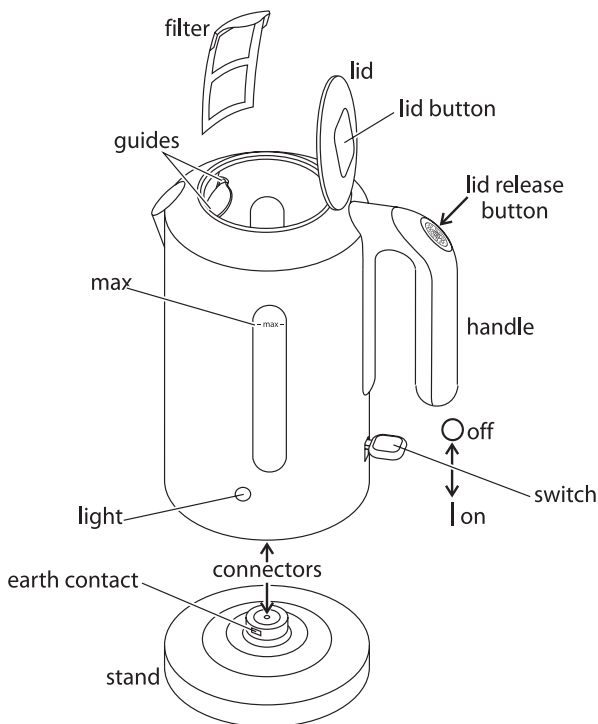

Read the instructions and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it till you know the appliance works.

important safeguards

Follow basic safety precautions, including:

- 1 This appliance must only be used by or under the supervision of a responsible adult. Use and store the appliance out of reach of children.
- 2 Don't put the kettle, stand, cable, or plug in any liquid; don't use the kettle in a bathroom, near water, or outdoors.
- 3 Don't touch hot surfaces. Use the handle and lid button.
- 4 Don't use the kettle without the filter in place – it may spit boiling water
- 5 Don't open the lid while the water is heating.
- 6 Take care when pouring – pour slowly, and don't over-tilt the kettle.
- 7 The scald hazard lasts long after boiling. Keep the kettle, stand, and cable away from the edges of worktops and out of reach of children.
- 8 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 9 Wind excess cable beneath the stand.
- 10 Unplug the stand when not in use, before moving and before cleaning. Let the kettle cool down before cleaning and storing away.
- 11 Check the lid is fully closed before switching the kettle on, otherwise it may not switch off.
- 12 Check the kettle is properly located on the stand before switching on.
- 13 Don't switch on unless the kettle contains at least 2 cups of water.



- 14 Don't fill past max, or it may spit boiling water.
- 15 Remove the kettle from its stand before filling or pouring.
- 16 Keep the kettle, stand, cable, and plug away from sources of heat.
- 17 Don't use the kettle for any purpose other than heating water.
- 18 This appliance must not be operated by an external timer or remote control system.
- 19 Use the kettle only with the stand supplied (and vice versa).
- 20 The appliance must only be connected to an earthed power socket.
- 21 Don't use the appliance if it's damaged or malfunctions.
- 22 If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, in order to avoid hazard.

household use only

before using for the first time

Fill to max, boil, discard the water, then rinse. Do this three times, to remove manufacturing dust, etc.

positioning

- 1 Put the stand on a stable, level surface. Route the cable so it doesn't overhang, and can't be caught or tripped over.
- 2 Wind excess cable beneath the stand

filling

caution keep clear, steam may escape from the lid.

- 3 Switch the kettle off – move the switch to ○.
- 4 Remove the kettle from the stand.
- 5 Press the lid release button to open the lid.
- 6 Fill with at least 2 cups of water, but not above max (inside the kettle).
- 7 If you overfill, the kettle may spit boiling water.
- 8 To close the lid, press the button on the centre of the lid, till you hear it click.
- 9 Be careful, the button may be hot.
- 10 Check the lid is closed, or the kettle won't switch off when it boils.

switching on

- 11 Check the switch is off (move it to ○).
- 12 Plug the stand into the wall socket.
- 13 Put the kettle on the stand – take care not to spill.
- 14 Move the switch to |.
- 15 The light will come on, and the kettle will heat up.

switching off

- 16 When the water boils the kettle will switch off, the switch will return to ○ and the light will go out.
- 17 To switch off manually, move the switch to ○.

general

- 18 Remove the kettle from the stand before pouring.
- 19 To avoid the risk of splashing, pour slowly and don't over-tilt the kettle.
- 20 Don't tilt the kettle backwards, water might get on to the control area. If this happens, let the kettle dry before use – sit it somewhere warm for 12 hours.
- 21 When you lift the kettle, you may see moisture on the stand. Don't worry – it's the steam used to switch off automatically, which then condenses and escapes via vents under the kettle.
- 22 You may see some discolouration on the floor of the kettle. Again, don't worry – it's due to the bonding of the element to the kettle floor.

using with insufficient water

- 23 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.
- 24 You must then remove the kettle from its stand to reset the cut-out.
- 25 Sit the kettle on the work surface till it's cold.
- 26 Don't fill it the kettle till it's cold, or it may spit.

care and maintenance

- 27 Switch the kettle off (○), unplug the stand from the wall socket, and let the kettle cool down fully before cleaning.
- 28 Wipe the kettle, inside and out, with a damp cloth. You may use a little household detergent, but if you do, rinse well to avoid tainting the water.
- 29 Keep all connectors and sockets dry.
- 30 Don't put the kettle or stand in any liquid.
- 31 Don't use harsh or abrasive cleaning agents or solvents.

water filter

- 32 Scale particles suspended in the water may give it a cloudy or greasy appearance. The filter will prevent these particles going into your drink. If you see deposits on the filter, clean it, otherwise the performance of your kettle will drop, your drinks may contain scale, and the water inside the kettle may look cloudy.

cleaning the filter

- 33 Check your hands are free from soap, or anything which might leave a taint.
- 34 Switch the kettle off, and let it cool.
- 35 Open the lid.
- 36 Use the tab on the filter to pull the filter out of the guides, then lift it out of the kettle.
- 37 Rinse the filter under a running tap while brushing with a soft brush.
- 38 Rinse the kettle, in case scale particles have fallen inside.
- 39 Push the top of the filter between the guides, stop when you can't push it any further.
- 40 Give the filter a gentle shake to check it's fitted correctly.
- 41 Close the lid.

caution don't use the kettle without the filter in place – it may spit boiling water

descale regularly

- 42 Limescale may be white, coloured, even rusty-looking.
- 43 It may cause overheating, and reduce the working life of the element. It may also make the safety cutout operate prematurely, switching the kettle off before the water boils.
- 44 As the element is mounted beneath the kettle, scale can build up only on the walls and floor of the kettle, where it can be seen and dealt with.
- 45 If you see scale forming, wipe it off.
- 46 Descale regularly, (at least monthly) to keep your kettle in good working order.
- 47 Use a descaler suitable for use in plastic products (most products have plastic parts). Follow the instructions on the descaler, rinse several times, then fill, boil and discard the water, to ensure no residues are left.

✳ Products returned under guarantee with faults due to scale will be subject to a repair charge.

wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



CHANGING THE PLUG


Should the need arise to change the fitted plug, follow the instructions below.

Please note, connecting to other power sources may damage the appliance.

Connect a three-pin plug as follows:

The wires in this mains lead are coloured in accordance with the following code:

- Green/Yellow = Earth
- Blue = Neutral
- Brown = Live

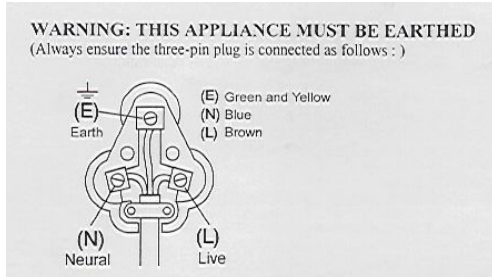

PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.

WARRANTY

Amalgamated Appliances (Pty) Limited ("the Supplier") warrants to the original purchaser of this product ("the Customer") that this product will be free of defects in material and workmanship which under normal, personal, family or household purpose manifest themselves within a period of 365 days from the date of purchase or in respect of commercial or professional purposes, manifest themselves within a period of 90 days from the date of purchase. Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the Supplier's normal charge for service and/or spares will be payable by the Customer upon collection of the repaired product. If a claim is made in terms of the aforesaid warranty within the first 7 days from the date of purchase, the faulty product will be exchanged (provided that the product is in its original packaging with all accessories). Failing return of the product within 7 days, the Supplier's liability shall be limited on return to the Supplier of the product or parts thereof, to the replacement or repair (in the sole discretion of the Supplier, or its duly authorised service dealer) of the product to eliminate any defect in workmanship or materials found to be due exclusively to any acts or omissions on the parts of the Suppliers, of which defects the Supplier shall have been notified in writing by the Customer within the aforesaid warranty period. The warranty provided herein and the obligations of the Supplier as aforesaid are in lieu of, and the Customer waives, all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the Supplier in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use, this product and whether or not occasioned by the Supplier's negligence (gross or otherwise) or any act or omission on its part. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, abuse or any non-authorized modification of the product. The warranty does not include replacement of light bulbs, heater bars, paper bags or any glass, plastic bowl or jug or other expendables. During the warranty period the product should be taken to a service centre of the Supplier or one of its duly authorised service agents. The Supplier neither assumes nor authorises any other person to assume for it, any additional liability in connection with the sale or servicing of its products.

AMALGAMATED APPLIANCES / TEDELEX TRADING (PTY) LTD

JOHANNESBURG
29 HERONMERE ROAD
BOOYSENS, JOHANNESBURG, 2016
CAPE TOWN
DURBAN

TEL NO. (011) 490-9000

TEL NO. (021) 535-0600

TEL NO. (031) 792-6000