



Russell Hobbs

INSTRUCTIONS AND WARRANTY



MODEL NO. RHTF91

RUSSELL HOBBS 91cm TOWER FAN

1-year standard warranty
Warranty will be extended another year if you register your product
online within 12 months of purchase.

(visit <https://russellhobbswarranty.co.za/>)



Congratulations on purchasing our Russell Hobbs 91cm Tower Fan. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

FEATURES OF THE RUSSELL HOBBS 91cm TOWER FAN

- 91cm Tower fan
- Energy-efficient 45W motor
- 4 Speed settings
- LED Display with touch panel control
- Remote control included
- 3 Fan modes (Normal/ Natural/ Sleep)
- Smooth horizontal Oscillation
- Timer off function (1-8 hours)
- For domestic use only
- 1-year standard warranty. Warranty will be extended for another year if you register your product online within 12 months of purchase (visit <https://www.russellhobbs.co.za>)

IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed including the following:


1. Please read the instructions carefully before using any appliance.
2. Use the fan only for purposes described in the instruction manual.
3. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
4. Incorrect operation and improper use can damage the appliance and cause injury to the user.
5. The appliance is intended for household use only. Commercial use invalidates the warranty and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and

knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

7. Avoid any contact with moving parts.
8. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
9. Do not disassemble the appliance. There are no user serviceable parts inside.
10. Do not immerse appliance in water or other liquids. Do not use near sinks, baths and showers
11. Appliance should not be used outdoors, placed near a hot gas, electrical burner or placed in a heated oven
12. Do not block any ventilation openings.
13. Turn off and unplug before cleaning or storing.
14. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of appliance.
15. To protect against electrical shock, do not immerse the fan, plug or cord in water or any other liquid or spray with liquids.
16. Children should be supervised to ensure that they do not play with the appliance
17. Close supervision is required when any appliance is used near or by children, pets and peoples with disabilities.
18. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid an electrical hazard.
19. Do not operate the fan in the presence of explosive and/or flammable fumes.
20. Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent
21. To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug or the power cord to water or any other liquid.
22. Place the fan on a dry level surface
23. Do not hang or mount fan on a wall or ceiling
24. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the fan when not in use, before cleaning or when adding or removing parts.

25. This fan should not be placed in a damp place or where there is high humidity, such as a bathroom.
26. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
27. DO NOT carry the appliance by the power cord.
28. In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above-mentioned pre-cautions and instructions, could affect the safe operation of this machine.
29. The fan should be placed on a flat and stable surface when operating to avoid overturning

PARTS DIAGRAM

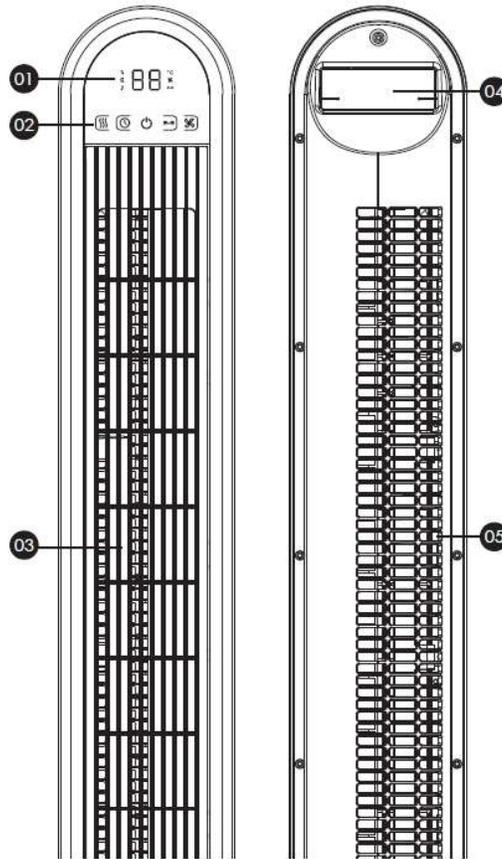


1	LED DISPLAY	3	AIR OUTLET	5	AIR INLET
2	CONTROL PANEL	4	CARRY HANDLE/ REMOTE HOLDER		


ASSEMBLY INSTRUCTIONS

Your Fan has been packaged unassembled to minimise packaging waste. Each part is designed to fit together and be disassembled easily for cleaning or storage.


1. Stagger the front and rear bases slightly, align pegs with slots and snap into place.

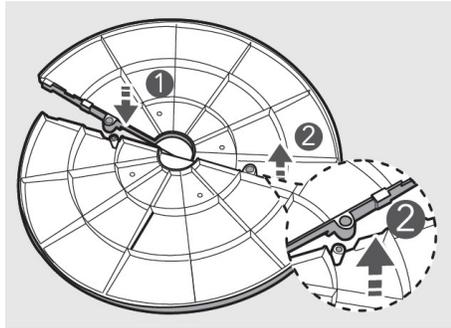

2. Unscrew the 4 thumb screws (attached to the body bottom) counterclockwise.

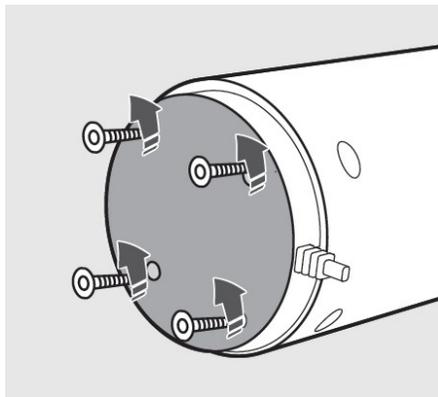

3. Align the pegs with slots on the body. Secure the assembled base to the body by tightening the 4 thumb screws in the screw holes.

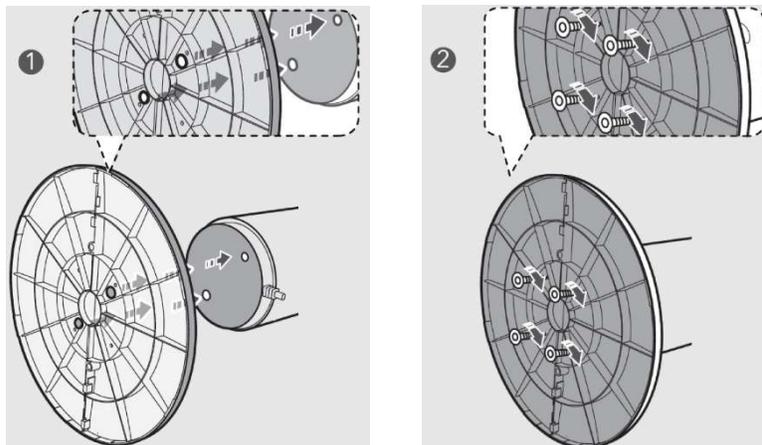


CONTROL PANEL & REMOTE CONTROL


Control Panel



Remote Control

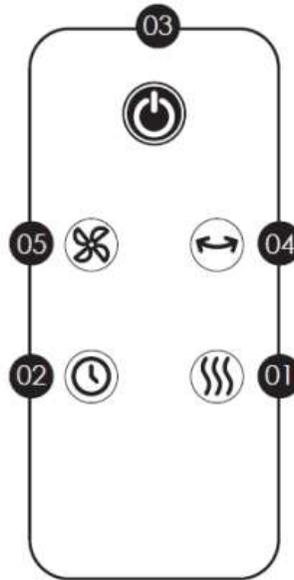

LED Screen

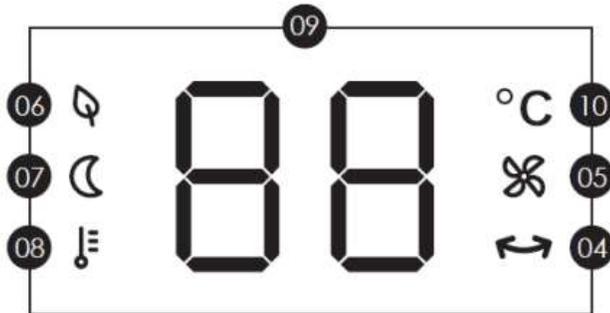

1	FAN MODE	6	NATURAL MODE
2	AUTO OFF TIMER	7	SLEEP MODE
3	POWER ON/OFF	8	AUTO MODE
4	OSCILLATION	9	FAN SPEED/ TIMER/ TEMP
5	FAN SPEED	10	CURRENT TEMP UNIT

OPERATING INSTRUCTIONS

Make sure that the fan is fully assembled before use. Plug in the power supply and the buzzer will sound, the digital screen will display the current room temperature (range: 0-50°C), the temperature indicator will be on, and the machine will be in standby mode.

1. ON/OFF

Press once to turn on at default setting (fan speed 2 and normal mode).

Press once again to turn off.

If power is not disconnected, it will always remember your last settings (except timer setting) when it is turned on again.

2. FAN SPEED

Once switched on, the fan will default to fan speed 2.

Press the fan speed key to cycle through fan speed sequence

02→03→04→01→02→

3. TIMER OFF FUNCTION

Press the button to choose the desired future off time between 1-8 hours.

Once the timer is set, press the timer button and the digital display will display the remaining time. Other settings will not change.

When the timer is on, changing the fan speed, oscillation or fan mode will not change the timer settings.

To cancel the timer, set the time to 0H or turn the fan off and on again.

4. OSCILLATION FUNCTION

Press the button once to oscillate horizontally. Press the button again to switch off oscillation.

5. FAN MODE (NORMAL, NATURAL, SLEEP/ AUTO)

Press the button to select normal mode, natural mode, sleep mode or auto mode

Normal mode: unit operates in selected fan speed.

Natural mode: unit operates according to computerized intervals of changing speeds.

Sleep mode: Fan speed reduces every 30 minutes until it reaches low speed, then stays in low speed. In sleep mode, fan runs at its quietest setting.

Auto mode: Fan speed adapts to the ambient room temperature.

6. AUTO DISPLAY OFF

In standby mode, if there is no operation within 1 minute, the display will turn off.

Pressing any key has no response, except pressing ON/OFF key to turn the fan on.

When the fan is operating, if there is no operation within 1 minute, the display will turn off. Press any key to activate the display and press again to trigger the function.

7. MEMORY FUNCTION

If the power is not disconnected, the fan will remember the last settings (except timer setting) once it is turned on again.


8. REMOTE CONTROL BATTERY

Battery model: CR2032 DC3V

Warning:

- Keep batteries out of reach of children. Should a child swallow a battery, consult a doctor immediately.
- Do not recharge or dispose of battery in fire.
- Keep in a dry and cool place.

Battery Disposal: please dispose of the used battery per municipal or provincial law.

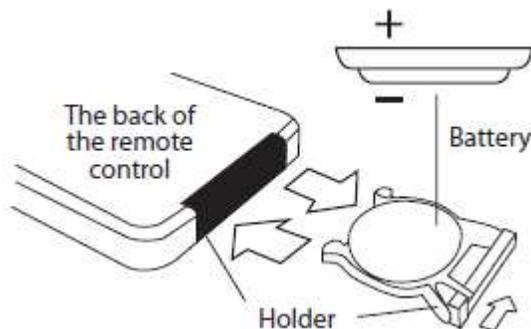

CLEANING AND MAINTENANCE

- Turn off and unplug the unit prior to cleaning.
- The grilles can be cleaned by vacuuming with a brush attachment.
- Use a soft duster or a cloth rag to dust off all the surfaces
- Clean body with a clean, damp cloth and wipe dry.
- Never spray with liquids or submerge the fan in water or any other liquid.
- Do not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

STORING THE APPLIANCE

- Unplug the unit from the wall outlet and clean all the parts as instructed above. Ensure that all parts are dry before storing.
- Store the appliance in its box or in a clean, dry place.
- Never store the appliance while it is still wet or dirty.
- Never wrap the cord around the appliance

SERVICING THE APPLIANCE

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

If the appliance still does not work after checking the above:

- Consult the retailer for possible repair or replacement. If the retailer fails to resolve the problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- A reason is provided for why it is being returned.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved Home of Living Brands (Pty) Limited-service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.

CHANGING THE PLUG

Should the need arise to change the fitted plug, follow the instructions below.


This unit is designed to operate on the stated current only. Connecting to other power sources may damage the appliance. Connect a three-pin plug as follows:

The wires in this mains lead are coloured in accordance with the following code:

Green/Yellow = Earth

Blue = Neutral

Brown = Live

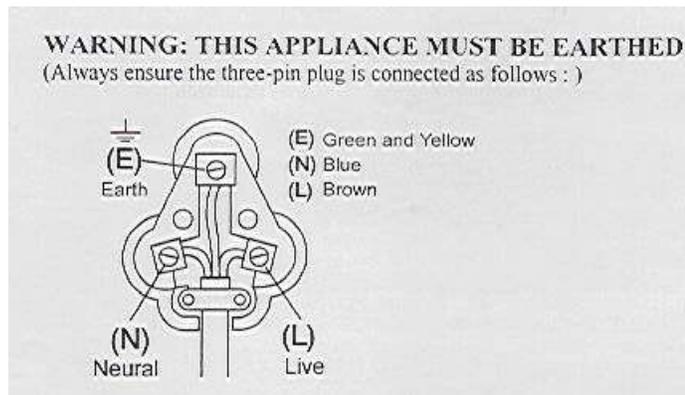

If the mains cord **does not** have a green and yellow wire then do not connect anything to the Earth pin.

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE
IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.**

1 YEAR WARRANTY

1-year standard warranty. Warranty will be extended for another year if you register your product online within 12 months of purchase (visit <https://www.russellhobbs.co.za>)

W A R R A N T Y AND EXTENDED WARRANTY

1. Home of Living Brands (Pty) Limited ("Home of Living Brands") warrants to the original purchaser of this product ("the customer") that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase ("warranty period").
2. Home of Living Brands shall extend the warranty period for a further period of 1(one) year ("extended warranty period"), on condition that the purchaser registers the product on the website, within 12 months from the date of purchase of the product. The website address for registration: <https://russellhobbswarranty.co.za/>
3. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product ("the supplier") thereof within the warranty period or if applicable, the extended warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.
4. The faulty product must be taken to the supplier's service centre to exercise the warranty.
5. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where (a) the customer is not the cause of the product breaking, and (b) the product has been used for the intended purpose stipulated in the product manual. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorised modification or repair of the product.
6. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer. In this regard any accessories supplied with the product by the supplier, may be excluded in this warranty or extended warranty (see Exclusions to Warranty and Extended Warranty document).
7. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3 (three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer, subject to the supplier's discretion.
8. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.

HOME OF LIVING BRANDS (PTY) LTD (JOHANNESBURG)

NATIONAL CONTACT

TEL NO. (087) 245-0029

www.homeoflivingbrands.com

www.russellhobbs.co.za

www.facebook.com/RussellHobbsSA

EXCLUSIONS TO WARRANTY AND EXTENDED WARRANTY

- 1.** Any accessories supplied with the product, including but not limited to, bowls, jugs, mills, or carafes made either of glass or plastic and supplied with this appliance (hereinafter referred to as “the accessory or accessories”), is warranted to be free from material and workmanship defects for the duration of the appliance warranty.
- 2.** The accessories should give trouble free service when used in accordance with the directions described in the instruction manual. However, the accessories will be damaged if subjected to impact, and this damage is not covered by the warranty. Such impact damage can occur either from the outside (if for example it is dropped or knocked against a hard surface), or from within (if for example foreign objects are placed within the accessories and the power is switched on).
- 3.** Should you need to replace an accessory during the warranty period; a claim for a free replacement will only be considered if the item (including all shards and broken parts) is returned to the nearest HOLB service centre for examination.
- 4.** The remains of the accessory will be carefully examined by the relevant professionals and if it is determined (at the sole discretion of HOLB) that the damage was caused by impact, then the claim will be refused and will not be covered by the warranty or any extended warranty.
- 5.** Any replacement part provided in terms of clause 4 above will become a chargeable item payable by the customer.