



# Russell Hobbs

## CERAMIC HEATER INSTRUCTION MANUAL Model: RHCTH1

---

**READ AND SAVE THESE INSTRUCTIONS**



**FOR DOMESTIC USE ONLY**

**Please read these instructions carefully and keep for future reference. In order to prevent the risks of a fire, an electrical shock, burns and other injuries, it is imperative to observe basic safety measures when using electrical appliances.**

***Please read the following information carefully before using the appliance for the first time for your own safety and to ensure correct use.***

### **IMPORTANT NOTES**

1. The specified voltage must match the mains voltage. Use an adequate wire cross-section.
2. The appliance air inlet and outlet openings must not be obstructed in any way!
3. Never move the heater during operating, always unplug heater when not in use.
4. Never use the appliance if the appliance or cord is damaged. The appliance may only be opened up and repaired by authorized qualified personnel.

### **SAFETY INSTRUCTIONS**

**When using any electrically powered product, basic safety precautions should always be followed, including the following:**

**PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.**

**WARNING** - to reduce the risk of fire, electrical shock or injury to persons or property:

1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Remove the unit from its packaging and check to make sure it is in good condition before using.
3. Do not let children play with parts of the packing ( such as plastic bags)
4. Close supervision is necessary when the product is used by or near children or infirm persons. Do not allow children to use it as a toy.
5. Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
6. Before unplugging the power cord, be sure to turn the power off. When touching the unit, be sure your hands are dry to prevent electrical shock.
8. Ensure the cord is fully extended before use and arrange it so that it is not in contact with any part of the heater.
9. In use, some parts of the heater are hot. When moving, hold the heater only by the handle provided.
10. Do not use the heater in areas such as garages where petrol, paint or other flammable substances are used or stored.
11. Do not use near or point the heater to furniture, animals, curtains or other inflammable objects. Keep combustible materials such as furniture, bedding and any other combustible materials at least 1 metre from the front and sides, and from the rear of the heater.
12. Do not place the cord under carpet or cover with throw rugs or furniture. Arrange the cord so that it cannot be tripped over.
13. Do not place the heater on bedding or on thick and long pile carpet where the openings may be blocked.
14. To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.

15. This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, bathroom swimming pool etc. where the likelihood of immersion or splashing could occur.
16. Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
17. A common cause of overheating is deposits of dust and fluff entering the heater. Ensure these deposits are removed regularly by unplugging the heater, allowing it to cool and cleaning as described in the Care, Cleaning and Storage section.
18. Be sure that no other high current appliances are plugged into the same circuit with your heater as an overload can occur.
19. Avoid the use of an extension cord as the extension cord may overheat and cause a risk of fire.
20. Do not use the appliance for other than its intended use.
21. Do not use outdoors. **FOR INDOOR USE ONLY.**
22. Do not leave the appliance unattended when switched on.
23. Do not place objects on the product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, etc. Do not cover the unit when in operation.
24. Do not position the heater immediately below a socket-outlet.
25. The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
26. This product is intended for normal domestic/household use only.
27. Use this heater as described in this manual. Any other uses, not recommended by the manufacturer, may cause fire, electric shock, or injury to persons and may void the warranty.

## **LOCATION**

1. The appliance should be placed with a minimum distance of 90 cm away from flammable objects (e.g. curtains), walls or other structures!

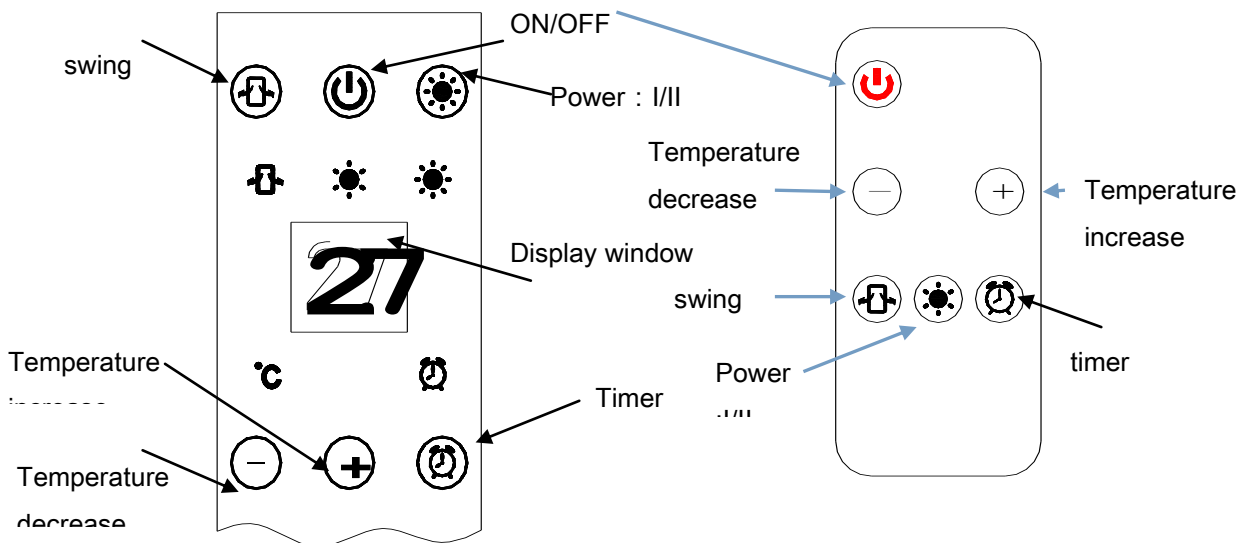 
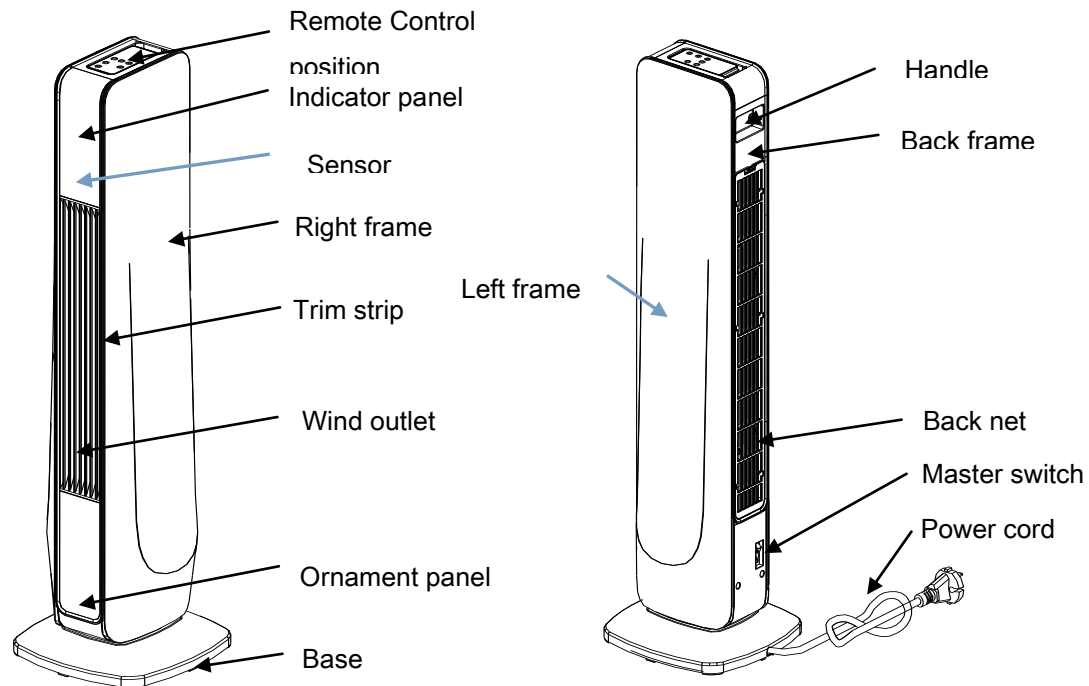 
## **POWER CORD**

1. Use only an approved extension cord that is suitable for the appliance rating!
2. Do not lay the cord under a carpet. Do not lay rugs, mats or similar articles on it. Position the cord so that it does not pose an obstruction or a tripping hazard.
3. Never pull the plug out of the socket at the cord!
4. Always disconnect the mains plug when the appliance is not in use.  
Attention! The appliance may only be used for normal domestic use and not for industrial purpose.



## **BEFORE USE**


1. Before use, remove all packaging and inspect the appliance for any damages. If there are appears to be any damages, please take back to place of purchase for a replacement.
2. Ensure that all the accessories are included as per diagram above before you can continue with the installation.
3. Ensure that the location of the heater installed is not directly under a power socket and that a power socket is available to power the appliances for use.


## KNOW THE HEATER





## USING THE HEATER

1. Carefully remove the heater from the plastic bag and the carton.
2. Place the heater on a firm level surface,.
3. Setting the master button to "off", on the base of the unit, plug the cord set into a 220-240v~AC electrical outlet.
4. Plug in, Switch the power point to the on position then turn the master button on the heater to the on position, the heater in standby mode, LED display room temperature,  centigrade light, Please wait 3 seconds, then start to operate any function, after 30 seconds, if no operation, light and LED switch off.
5. Turn the heater ON by pressing the ON/OFF button "". The unit is now in fan mode. This will conduct recirculation of the room air.

Upon pressing the “I/II” button the unit will be in the **LOW**  heat mode, it's 1200W rating power.

Pressing the “I/II” button second time will put the heater into **HIGH**  heat mode, it's 2400W rating power, low and high indicator light together,

6. To turn the heater OFF, press the ON/OFF button “”.



NOTE: To assist in maintaining the internal components, after pressing the “ON/OFF” button “” the fan will continue to blow room air for a period of 30-60 seconds before shutting down to standby.

### OSCILLATING BUTTON

This heater has an oscillating function. To switch the function on, press the SWING button. To stop it, press the oscillating button again.

### TIMER FUNCTION

This function will work in any mode. The timer function allows you to set the length of operation from 1 to 8 hours.

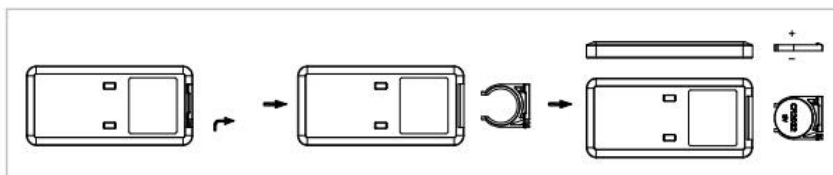 
To set the timer, press the TIMER button. The display screen will show 1h, indicating the heater will operate for 1 hour before shutting down to standby. To increase the operation time, continue to press the  button until the desired operation time is displayed. To cancel the timer feature press the  button until all time indicator light off. This returns the heater to continuous running. Each press increase 1 hour.

### TEMPERATURE SETTING:

- 1) Operate the Heating Mode as per above instructions.
- 2) The LED screen will display the room temperature, to adjust the temperature, press “+” to increase the desired temperature and “-” to decrease the desired temperature.
- 3) When the air temperature reaches 1 degree above the set temperature, the heater will cut off. The heater stops working but the fan continues working to allow the product to cool down and maintain the temperature.
- 4) When the air temperature drops 3 degrees below the set temperature, the unit will come back on.
- 5) Temperature can be set from 10 degrees to 49 degrees, by pressing the “+” and “-”.

## **Battery**

The remote control use one button cells, model No. CR2025 (3V). We recommend the use of Lithium type battery for longer use.



**Note: Please follow battery disposal instruction on battery packaging, or contact your local councils for safely disposal of batteries.**

## SAFETY SYSTEM

- In the event of abnormal overheating, a safety device shuts down the appliance automatically. After a short cooling down phase, the appliance is ready for use again.
- If you still notice the same defect as above mentioned, remove the plug from the socket and consult your authorized dealer to your after-sales service department.
- During use, do not touch or cover the air outlet. This may cause the unit to overheat, and the safety device to operate.
- The unit is also fitted with a tip over switch. Do not use on thick and long pile carpets, as the heater may not work, due the tip over switch not been activated.

## MAINTENANCE

- Your appliance must be switch OFF via the main power supply and unplugged before proceeding with any cleaning work.
- Clean the housing with a lightly damp cloth, a vacuum cleaner or a dusting brush.
- Never use flammable or abrasive cleaning agents such as benzene or spirit to clean the appliance.
- Never immerse the appliance in water!
- Clean the air inlet and outlet regularly with a vacuum cleaner.
- If the appliance is not used for an extended period it must be protected against excessive dust and dirt. Please dismount the heater and store in a dry place away from sunlight and dirt.

## SPECIFICATIONS

Model No	RHCTH1
Voltage	220-240V AC
Frequency	50Hz
Output Power (W)	2400W

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE IN THE EVENT OF A CLAIM  
UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.**

## **2 YEAR WARRANTY**

*1 year retail | 1 year extended warranty upon registration\**

visit [www.russellhobbs.co.za](http://www.russellhobbs.co.za)

### **W A R R A N T Y AND EXTENDED WARRANTY**

1. Home of Living Brands (Pty) Limited ("Home of Living Brands") warrants to the original purchaser of this product ("the customer") that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase ("warranty period").
2. Home of Living Brands shall extend the warranty period for a further period of 1(one) year ("extended warranty period\*"), on condition that the purchaser registers the product on the website, within 12 months from the date of purchase of the product. The website address for registration is as follows: <http://russellhobbs.co.za/info-pages/warranty-info.aspx>. The extended warranty period only applies to products purchased on or after 1 October 2017.
3. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product ("the supplier") thereof within the warranty period or if applicable, the extended warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.
4. The faulty product must be taken to the supplier's service centre to exercise the warranty.
5. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where the customer has not broken the product themselves, or used the product for something that it is not supposed to be used for. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorised modification or repair of the product.
6. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer.
7. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3 (three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer, subject to the supplier's discretion.
8. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.

#### **HOME OF LIVING BRANDS (PTY) LTD (JOHANNESBURG)**

JOHANNESBURG  
CAPE TOWN  
DURBAN

TEL NO. (011) 490-9600  
TEL NO. (021) 552-5161  
TEL NO. (031) 303-1163

[www.homeoflivingbrands.com](http://www.homeoflivingbrands.com)  
[www.russellhobbs.co.za](http://www.russellhobbs.co.za)  
[www.facebook.com/RussellHobbsSA](https://www.facebook.com/RussellHobbsSA)