



Russell Hobbs

INSTRUCTIONS and WARRANTY



MODEL No. RHHD24
Russell Hobbs Hair Dryer

Extend your 1 year retail warranty to an additional
1 year by registering your purchase here:



Congratulations on purchasing your Russell Hobbs Hair Dryer. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

FEATURES OF THE RUSSELL HOBBS HAIR DRYER

- Three heating settings
- Two speed settings
- Concentrator for quick drying
- Cool shot function to set styles
- Over heat protection
- Hanging loop for easy storage
- 1800-2200W
- AC motor
- 1.8m Cord length
- Includes Diffuser
- For domestic use only
- 1 year standard warranty. Warranty will be extended for another year if you register your product online within 12 months of purchase (visit <https://russellhobbswarranty.co.za/>)

IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed including the following:

1. Please read the instructions carefully before using any appliance.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
3. Incorrect operation and improper use can damage the appliance and cause injury to the user.

4. The appliance is intended for household use only. Commercial use invalidates the warranty and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
5. Avoid any contact with moving parts.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance.
8. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid an electrical hazard.
9. Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorized service agent
10. To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug or the power cord to water or any other liquid.
11. Never immerse the unit in water or any other liquid for cleaning purposes.
12. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
13. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
14. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
15. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
16. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.

17. Do not use the appliance on a gas or electric cooking top or over or near an open flame.
18. Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension cord, ensure that the cord is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
19. This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
20. DO NOT carry the appliance by the power cord.
21. Do not leave this appliance unattended during use. Always unplug the unit when not in use or before cleaning.
22. Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
23. Ensure that the switch is in the "Off" position after each use.
24. The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
25. In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned pre-cautions and instructions, could affect the safe operation of this machine.

ADDITIONAL SAFEGUARDS

 
- Ensure the hair dryer is only used on real human hair. The hair dryer is not intended for use on synthetic hair.
- Ensure the hair dryer is protected from dripping or splashing water.

- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water. Should the hair dryer be used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off. However it is not recommended to be used in a bathroom.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never put the hair dryer down on soft furnishings, bedding or close to a wall or any other flammable surface.
- Never cover the hair dryer.
- Always keep the rear air inlet and filter dust and fluff free.
- Do not block the air inlet or outlet.
- Always ensure hands are dry and hair is free from excess water before handling the plug or switching on the appliance.
- Allow the hair dryer to cool before cleaning and storing away.
- Do not use the appliance outdoors.
- Do not wrap the mains lead around the dryer and avoid twisting or kinking it. If this were to happen, please ensure that the cord is untwisted before use.
- Never carry or suspend the appliance by the mains lead.
- Do not use the appliance for any purpose other than those described in these instructions.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- If an appliance falls into water, unplug it immediately. Do not reach into the water. Have a specialist inspect the unit before operating it again.
- Do not direct hot air toward eyes or other heat sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- While using the appliance, keep your hair away from the air inlets.
- Do not operate the appliance with a voltage converter.

- This device has an overheating protection system. In the event of overheating, (if the air inlet or air outlet is covered) the device will automatically switch off. If this occurs, set the on/off switch to 0 (off), pull out the plug from the mains socket, and allow the device to cool down adequately. Before switching it back on, ensure that there are no hairs or foreign bodies blocking the air inlet.
- Do not switch on the device at the same time as another device with high power consumption plugged in to the same socket.
- Do not expose the device to temperatures below $-10\text{ }^{\circ}\text{C}$ or above $40\text{ }^{\circ}\text{C}$.

For domestic use only.

PARTS DIAGRAM

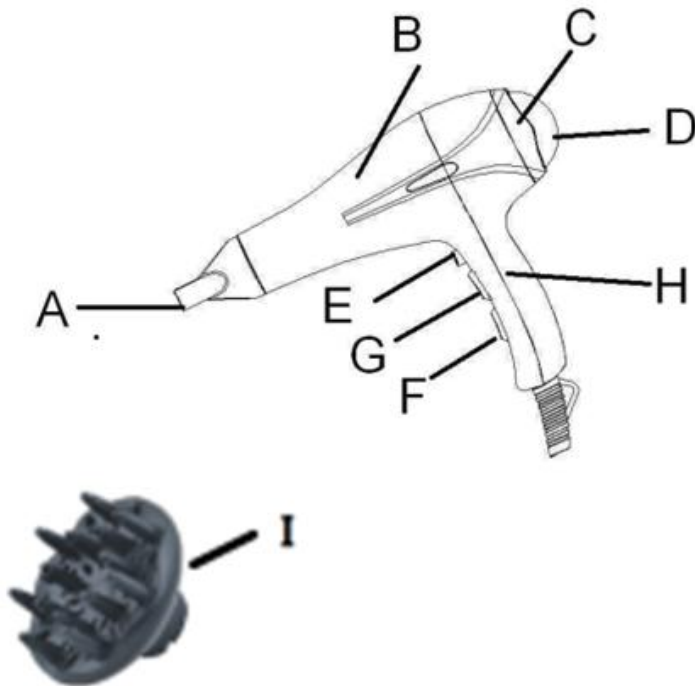

- A. Concentrator nozzle
- B. Housing
- C. Air inlet
- D. Detachable filter
- E. "COOL" function button

F. Speed control

G. Heat control

H. Handle

I. Diffuser

OPERATING YOUR HAIRDRYER

SPEED & HEAT SWITCHES

Ensure the control setting is in the “0” position when the hairdryer is plugged into the mains. Select the required speed and heat setting.

GENERAL

Wash and condition your hair as desired, then ‘rough-dry’ your hair. Add mousse or light setting agents evenly through the hair for hair protection and a long lasting style. If desired attach the concentrator nozzle. Start styling your hair at the back and work forwards. After using the attachment allow it to cool first before removing it from the hairdryer.

CONCENTRATOR /STYLING NOZZLE

The nozzle concentrates air flow on to a small area of air for fast easy styling. It is ideal for blow drying with a comb or styling brush. Divide your hair into small sections and point the dryer along the hair shafts from the roots to the ends, to give a smooth professional finish to the hair.

COOL SHOT

Use the cool shot setting for approximately 15 seconds after drying a section of hair, to set the style.

DIFFUSER

The diffuser is simply attached to the air outlet opening of the of the hair dryer-like styling nozzle. It makes it possible for you to dry your hair quickly and gently without whirling up your hair by virtue of the large-surface air outlet, and adds vitality to every hairdo. By placing the diffuser directly on the scalp, you dry the hairline. A dry hairline prevents the freshly styled hairdo from collapsing. Ideal for naturally curly, permed or fine hairstyles.

CLEANING AND MAINTENANCE

- This appliance is for household use only and is not user-serviceable.

- Do not open or change any parts by yourself. Please refer to a qualified electrical service department or return to the supplier if servicing is necessary.
- Always remember to unplug the unit from the electrical outlet when not in use and before cleaning. Ensure that the controls are set to “0”.
- It is much easier to clean the accessories directly after they have been used. Wash them in warm, soapy water, rinse and dry well.
- The body of the appliance and the stand should be cleaned with a damp cloth. Do not let water enter the appliance or the stand.
- Do not use bleach or other abrasive substance or solvents to clean your appliance as it can be damaging to the finish.
- Do not immerse the unit in water or any other liquid, or hold it under a running water to clean.
- To remove stubborn spots/marks, wipe the surfaces with a cloth slightly dampened in soapy water or mild non-abrasive cleaner.
- Unplug the unit from the wall outlet and clean all the parts as instructed above.
- After use, let the appliance cool off before storing.
- Ensure that all parts are dry before storing.
- Store the appliance in its box or in a clean, dry place away from children.
- Never store the appliance while it is still wet or dirty.
- Never wrap the power cord around the appliance.

SERVICING THE APPLIANCE

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

You have followed the instructions correctly

- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.
- Ensure the overheating protection didn't switch off the device. Set the on / off switch to 0 (off), pull out the plug from the mains socket, and allow the device to

cool adequately. Before switching it back on, ensure that there are no hairs or foreign bodies blocking the air inlet.

If the appliance still does not work after checking the above:

- Consult the retailer for possible repair or replacement. If the retailer fails to resolve the problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- A reason is provided for why it is being returned.

 
If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved Home of Living Brands (Pty) Limited service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.

CHANGING THE PLUG


Should the need arise to change the fitted plug, follow the instructions below.

This unit is designed to operate on the stated current only. Connecting to other power sources may damage the appliance.

WARNING: If your appliance has three wires (Green/Yellow, Blue, Brown) then it MUST be earthed. Connect a three pin plug as shown below

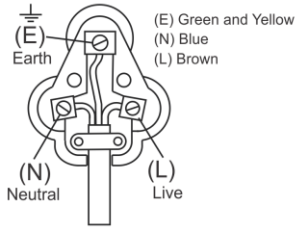

 If your appliance has only two wires (Blue, Brown) then it does not need to be earthed. Connect a three pin plug as shown below

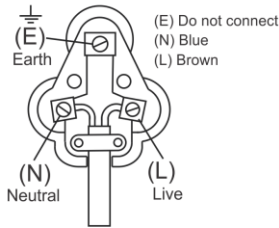

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE
IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.**

2 YEAR WARRANTY

*1 year retail | 1 year extended
warranty upon registration**

visit www.russellhobbs.co.za

WARRANTY AND EXTENDED WARRANTY

1. Home of Living Brands (Pty) Limited ("Home of Living Brands") warrants to the original purchaser of this product ("the customer") that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase ("warranty period").
2. Home of Living Brands shall extend the warranty period for a further period of 1(one) year ("extended warranty period**"), on condition that the purchaser registers the product on the website, within 12 months from the date of purchase of the product. The website address for registration is as follows: <http://russellhobbs.co.za/info-pages/warranty-info.aspx>. The extended warranty period only applies to products purchased on or after 1 October 2017.
3. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product ("the supplier") thereof within the warranty period or if applicable, the extended warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.

4. The faulty product must be taken to the supplier's service centre to exercise the warranty.
5. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where (a) the customer is not the cause of the product breaking, and (b) the product has been used for the intended purpose stipulated in the product manual. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorised modification or repair of the product.
6. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer. In this regard any accessories supplied with the product by the supplier, may be excluded in this warranty or extended warranty (see Exclusions to Warranty and Extended Warranty document).
7. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3 (three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer, subject to the supplier's discretion.
8. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.

HOME OF LIVING BRANDS (PTY) LTD (JOHANNESBURG)

JOHANNESBURG	TEL NO. (011) 490-9600
CAPE TOWN	TEL NO. (021) 552-5161
DURBAN	TEL NO. (031) 303-1163

www.homeoflivingbrands.com
www.russellhobbs.co.za
www.facebook.com/RussellHobbsSA

EXCLUSIONS TO WARRANTY AND EXTENDED WARRANTY

1. Any accessories supplied with the product, including but not limited to, bowls, jugs, mills or carafes made either of glass or plastic and supplied with this appliance (hereinafter referred to as "the accessory or accessories"), is warranted to be free from material and workmanship defects for the duration of the appliance warranty.
2. The accessories should give trouble free service when used in accordance with the directions described in the instruction manual. However, the accessories will be damaged if subjected to impact, and this damage is not covered by the warranty. Such impact damage can occur either from the outside (if for example it is dropped or knocked against a hard surface), or from within (if for example foreign objects are placed within the accessories and the power is switched on).
3. Should you need to replace an accessory during the warranty period; a claim for a free replacement will only be considered if the item (including all shards and broken parts) is returned to the nearest HOLB service centre for examination.

4. The remains of the accessory will be carefully examined by the relevant professionals and if it is determined (at the sole discretion of HOLB) that the damage was caused by impact, then the claim will be refused and will not be covered by the warranty or any extended warranty.
5. Any replacement part provided in terms of clause 4 above will become a chargeable item payable by the customer.