

## IMPORTANT SAFEGUARDS

1. Read the instructions carefully before use and save them for future reference.
2. Always disconnect the appliance from the mains supply when not in use and when cleaning.
3. Do not touch hot surfaces!
4. Don't immerse the appliance in water!
5. Close supervision is required when this appliance is used near or by children.
6. Never allow the cord to touch wet or hot surfaces, or become twisted.
7. DO NOT use the appliance if the heated surface is cracked.
8. Never attempt to open any part or dismantle the controls. Responsibility for failure cannot be accepted if this instruction has been ignored.
9. Never use the appliance with a damaged cord or plug, or after the appliance has malfunctioned or become damaged.
10. Care must be taken when placing heavy metal pots or pans on the glass surface.
11. Do not use sharp or abrasive objects to clean glass.
12. Do not place refrigerated or frozen foods/containers onto the Hot Tray surface once already heated.
13. Do not place plastic containers on heated surface.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.

## PLEASE RETAIN YOUR PROOF OF PURCHASE / RECEIPT IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED

### WARRANTY

Tedex Trading (PTY) Ltd warrants to the original purchaser of this product ("the customer") that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase ("warranty period").

1. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product ("the supplier") thereof within the warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.
2. The faulty product must be taken to the supplier's service centre to exercise the warranty.
3. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where the customer has not broken the product himself, or used the product for something that it is not supposed to be used for. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorised modification or repair of the product.
4. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer.
5. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3(three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer.
6. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.

Tedex Trading (PTY) Ltd  
www.amap.co.za  
011 490 9000  
031 792 6000  
021 535 0600


S12715AB

Concorde Printing: (031) 700 4443 Ref: 0425



# Russell Hobbs®

## INSTRUCTIONS/WARRANTY

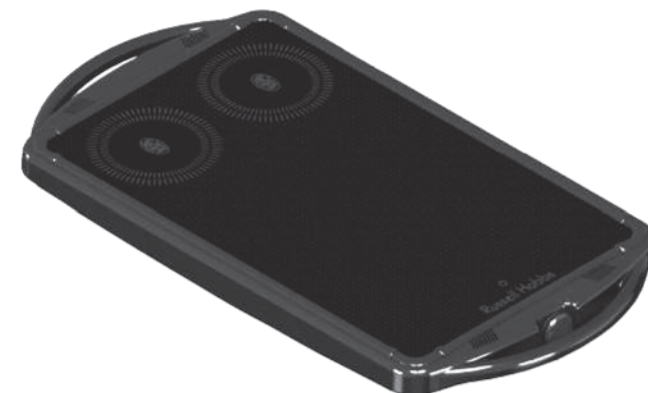

### MODEL NO. RHHT-204

## RUSSELL HOBBS Hot Tray

S12715AB

Congratulations on purchasing our Russell Hobbs Hot Tray, RHHT204. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

### IMPORTANT SAFETY INSTRUCTIONS

Before using the Hot Tray, always read the operating instructions and keep them readily available.


### PURPOSE AND INTENDED USE

The Hot Tray described in this operating manual is suitable for household use to heat food and keep food warm. Using the Hot Tray for anything other than its intended use may void the warranty.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.


### DESCRIPTION OF PARTS

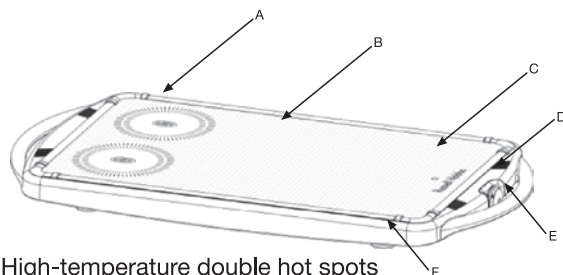

- A – High-temperature double hot spots
- B – Normal-temperature glass surface
- C – Cool-blue LED indicator light
- D – Soft-touch temperature control knob
- E – Insulated thermo-plastic handles
- F – Non-slip rubber feet


### GENERAL INFORMATION

1. Designed to keep food hot and in perfect condition for hours.
2. Meals can be prepared and cooked when convenient and served many hours later when friends and family are ready to eat.

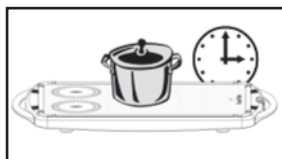

3. Food is maintained at a heat level just below cooking temperature to prevent overcooking and drying out – the two main causes for food losing its flavour.

 4. The double hot spots are about 20°C hotter than the rest of the Hot Tray surface – perfect for coffee, soups etc.



5. The temperature regulator ensures that the Hot Tray can be kept at an optimal temperature.

6. For best results, use shallow, flat bottomed, covered dishes.

7. Meat should be slightly underdone if it is to be kept on the Hot Tray for longer than 15 minutes.

8. Cover food with foil to prevent it from drying out.

### OPERATING INSTRUCTIONS

1. Turn the temperature control knob clockwise to the desired position. The indicator light will come on.



2. To increase the temperature, turn the control knob clockwise. To decrease the temperature, turn the control knob anti-clockwise. The indicator light may switch off initially until the glass has cooled to the desired temperature.




3. The indicator light will switch off as soon as the desired temperature is reached and will come on again as soon as the temperature has dropped by a preset amount. This will continue as the temperature regulator maintains a constant temperature.
4. A higher temperature setting may be required if the appliance is used outdoors or in an area where it is exposed to a breeze.



### CLEANING


1. Unplug the appliance before cleaning.
2. Let the appliance cool down.
3. Use a damp sponge and mild soap to clean the glass surface.

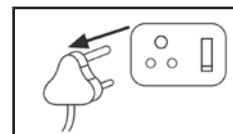

4. Avoid seepage of soap between the glass and frame.
5. Do not use abrasive or sharp objects to remove marks, as this will scratch the glass.

### STORAGE

1. Remove the plug from the mains socket.
2. Store in a dry area.
3. Don't store away when hot.


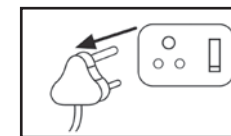


### SERVICE

**Note:** There are no user serviceable parts in this product. Never attempt to open any part or dismantle the controls.

Hints before returning the appliance:

1. Is your household socket working properly?
2. Are all required switches in the on position?
3. Ensure that the 3-pin plug is firmly in the socket and that the socket is switched on.

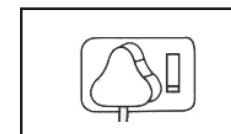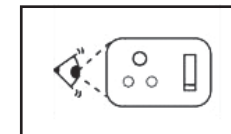

**NOTE:** If the cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard. If service becomes necessary within the warranty period the appliance should be returned to an approved Tedelex service centre. Servicing outside of the warranty period is still available but this will be chargeable.

