

25. NOTE: The blades are very sharp and should be handled with extreme care. Always unplug the unit before handling blades. When not in use, always keep the blades in the protective sleeve provided.

OPERATING INSTRUCTIONS

NOTE: This electric carving knife is suitable for use on cooked food and bakery items, but not for frozen meat and hard foods.

1. Holding the blades together at the base of the blade, with the cutting edge facing down, insert the blades into the motor housing until both blades click into place.
2. Plug the power cord into the power outlet and turn the power supply on.
3. Hold the knife by the handle. Pull the On/Off button towards the handle, and hold it there. The unit will automatically switch off if the button is released.
4. Use the unit to cut the food desired. Release the On/Off button when cutting is completed.

TIPS WHEN USING YOUR RUSSELL HOBBS ELECTRIC CARVING KNIFE


- Move the knife through the food in a downward motion. Do not saw the knife back and forth.
- Allow cooked meats to stand for about 15 minutes after cooking before slicing.
- Slice down to and around bone. **Do not** slice through bone or frozen foods, as this will damage the knife.
- Do not attempt to sharpen the serrated blades, this will damage them. Contact your local Amalgamated Appliances Service Division for replacement blades instead.

CLEANING AND MAINTENANCE

- This appliance is for household use only and is not user-serviceable.
- Do not open or change any parts by yourself. Please refer to a qualified electrical service department or return to the supplier if servicing is necessary.
- Always remember to unplug the unit from the electrical outlet when not in use and before cleaning. Ensure that the unit is off first.
- It is much easier to clean the blades directly after they have been used. Wash them in warm, soapy water, rinse and dry well.

Russell Hobbs®

INSTRUCTIONS AND WARRANTY



MODEL NO. RHK45

RUSSELL HOBBS ELECTRIC CARVING KNIFE

- The body of the appliance should be cleaned with a damp cloth. Do not let water enter the appliance.
- Do not use bleach or other abrasive substance or solvents to clean your appliance as it can be damaging to the finish.
- Do not immerse the unit in water or any other liquid, or hold it under a running tap to clean.
- To remove stubborn spots/marks, wipe the surfaces with a cloth slightly dampened in soapy water or mild non-abrasive cleaner. Rinse and dry a clean, dry, soft cloth.
- Unplug the unit from the wall outlet and clean all the parts as instructed above. Ensure that all parts are dry before storing.
- Store the appliance in its box or in a clean, dry place.
- Never store the appliance while it is still wet or dirty.
- Never wrap the power cord around the appliance.

SERVICING THE APPLIANCE

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent, in order to avoid any hazard. If service becomes necessary within the

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE
IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE
PRODUCED.**

WARRANTY

Amalgamated Appliances (Pty) Limited ("the Supplier") warrants to the original purchaser of this product ("the Customer") that this product will be free of defects in material and workmanship which under normal, personal, family or household purpose manifest themselves within a period of 365 days from the date of purchase or in respect of commercial or professional purposes, manifest themselves within a period of 90 days from the date of purchase. Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the Supplier's normal charge for service and/or spares will be payable by the Customer upon collection of the repaired product. If a claim is made in terms of the aforesaid warranty within the first 7 days from the date of purchase, the faulty product will be exchanged (provided that the product is in its original packaging with all accessories). Failing return of the product within 7 days, the Supplier's liability shall be limited on return to the Supplier of the product or parts thereof, to the replacement or repair (in the sole discretion of the Supplier, or its duly authorised service dealer) of the product to eliminate any defect in workmanship or materials found to be due exclusively to any acts or omissions on the parts of the Suppliers, of which defects the Supplier shall have been notified in writing by the Customer within the aforesaid warranty period. The warranty provided herein and the obligations of the Supplier as aforesaid are in lieu of, and the Customer waives, all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the Supplier in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use, this product and whether or not occasioned by the Supplier's negligence (gross or otherwise) or any act or omission on its part. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, abuse or any non-authorized modification of the product. The warranty does not include replacement of light bulbs, heater bars, paper bags or any glass, plastic bowl or jug or other expendables. During the warranty period the product should be taken to a service centre of the Supplier or one of its duly authorised service agents. The Supplier neither assumes nor authorises any other person to assume for it, any additional liability in connection with the sale or servicing of its products.

AMALGAMATED APPLIANCES (PTY) LTD

JOHANNESBURG	TEL NO. (011) 490-9000
29 HERONMERE ROAD	
P O BOX 39186	
BOOYSENS, JOHANNESBURG, 2016	
CAPE TOWN	TEL NO. (021) 535-0600
DURBAN	TEL NO. (031) 792-6000


WIN PRIZES ONLINE – www.russellhobbs.co.za

warranty period, the appliance should be returned to an approved Amalgamated Appliance (Pty) Ltd service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.

CHANGING THE PLUG

The unit is supplied with a 2 pin VDE plug, and is not earthed.

The wires in this mains lead are coloured in accordance with the following code:
No earth wire Blue = Neutral
Brown = Live

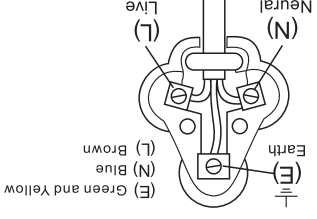

EARTHED

PLEASE NOTE: THIS IS A CLASS II PRODUCT AND DOES NOT NEED TO BE

If you wish to change the plug to a 3 pin, round pin plug, please connect as follows:

11. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.

12. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.

13. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.

14. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.

15. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.

16. Do not use the appliance on a gas or electric cooking top or over or near an open flame.

17. Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.

18. This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.

19. DO NOT carry the appliance by the power cord.

20. Do not leave this appliance unattended during use. Always unplug the unit when not in use or before cleaning.

21. Always operate the appliance on a smooth, stable surface. Do not place the unit on a hot surface.

22. Ensure that the unit is switched off after each use.

23. The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.

24. In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned pre-cautions and instructions, could affect the safe operation of this machine.

3

4

5

6

7

2

2

3

2

3

4

2