



Russell Hobbs®

INSTRUCTIONS AND WARRANTY




MODEL NO. RHGS01

**RUSSELL HOBBS GROOMING SET
WITH AN ALUMINIUM TRAVEL CASE.**

KEY DIAGRAM.

- 1 Release buttons - to change heads
- 2 On/Off switch
- 3 Charge light Charging connection
- 4 Charging Base/Connection

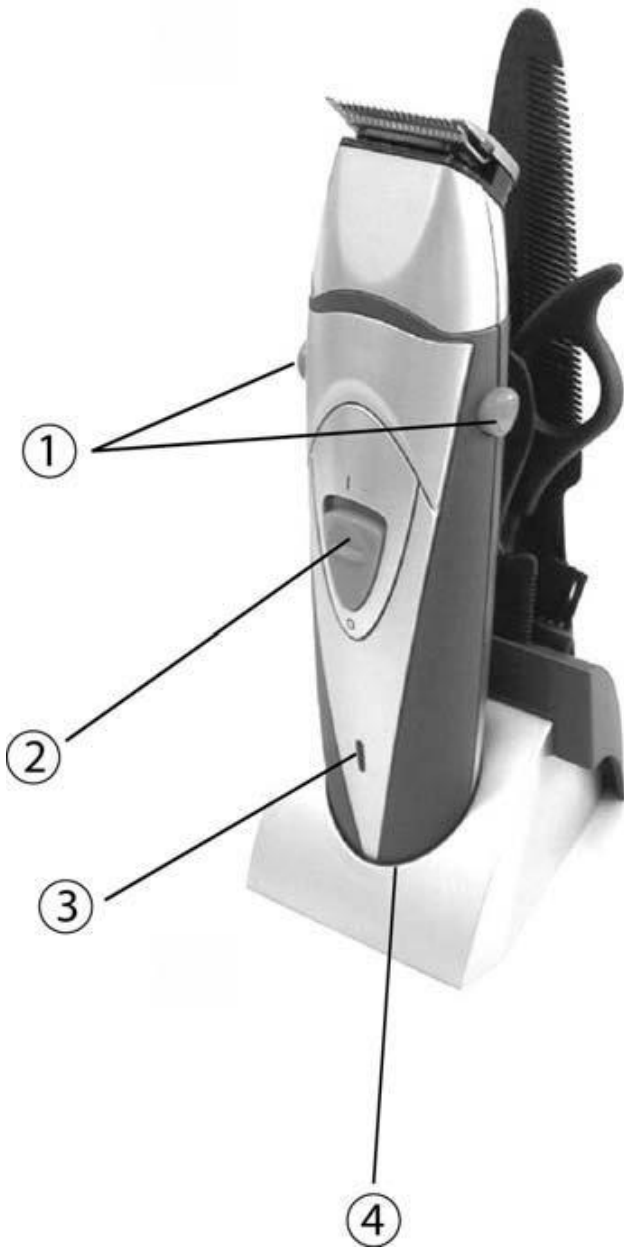

INTERCHANGEABLE HEADS



1. Hair Trimmer



2. Beard Trimmer



3. Etcher and Definer



4. Nose Trimmer



5. Shaver



1. Adjustable Comb:

2mm
4mm
6mm
8mm



2. Adjustable Comb:

10mm
12mm
14mm
16mm



3. Blending Comb

INSTRUCTIONS FOR USE

Please read and retain these instructions before operating for future reference.



- 1 Remove all packaging and keep safe until satisfied with your product.
- 2 Charge the clipper as described below.
- 3 Before initial use, oil blades by adding 3 drops of oil. Ceramic blades ensure longer use of the blades.

CHARGING THE CLIPPER

- 1 Ensure the on/off switch is off by pushing the switch downwards.
 - 2 Insert the charger lead into the charge connection at the bottom of the hair clipper. Alternatively insert into the stand and place the clipper firmly into the charge connection on the stand.
 - 3 Plug the AC/DC charger adaptor into a suitable mains supply and switch on. The charge light on the clipper will illuminate.
 - 4 Never leave the charge plugged in when not in use. Future charging should take approximately 12 hours. After the initial charging, do not leave charging for more than 12 hours.
- Good practice is to recharge the unit occasionally, not daily.

CHARGING THE CLIPPER – continued...

Do not charge for longer than the recommended time. Over charging will reduce the working life of the rechargeable battery. Occasionally let the battery run down completely before recharging to maintain its life period.

MAINS OPERATION

When the batteries are run down it is possible to use this appliance from the mains via the charge adaptor. Never use the charge adaptor in the bathroom or near any source of water. Insert the charger lead into the bottom of the clipper. Allow 5 minutes before continuing to use.

USING THE HAIR TRIMMER

- 1 Place a towel around the neck and shoulders of the person having the haircut.
- 2 Seat the person so their head is approximately at your eye level. This allows ease of visibility while cutting and a relaxed hold on the unit.
- 3 Before cutting, comb the hair so it is tangle free and brushed in the direction of growth.
- 4 Attach the hair trimmer (head number 1), by clicking it into place. Always ensure the clipper is switched off when changing heads and attachments.

5. If desired, select an adjustable comb (attachments 1 and 2). The adjustable cutting combs can have the cutting length adjusted by sliding out the bottom of the adjustable comb. The cutting lengths are 2mm, 4mm, 6mm, 8mm

(attachment 1) and 10mm, 12mm, 14mm and 16mm (attachment 2), depending on which adjustable comb is selected. The length selected is shown in the circle.

6. Make sure head 1 is attached to the clipper, and clip on the adjustable comb, once the desired length has been selected.

Switch on by pushing the on/off switch upwards.

7. For even cutting allow the comb to cut its way through the hair. Do not force it through quickly. Always remember to comb the hair frequently to remove trimmed hair and to check for uneven strands. Switch off when not in use by pushing the on/off switch downwards.

8. Attachment 3 can also be used for blending.

USING THE BEARD TRIMMER

1. To trim facial hair, attach head number 2. If desired, use attachments 1, 2 or 3 as well. The interchangeable heads can be changed by pushing the release buttons on each side of the clipper.

USING THE ETCHER AND DEFINER

2. For etching and defining attach head number 3. This head can be used for facial hair and head hair.
- 3.

USING THE NASAL TRIMMER

4. For nasal trimming attach head number 4. Lightly press the nasal trimmer against the wall inside the nose.
- 5.

USING THE SHAVER


4. For shaving facial hair attach head number 5. Gently press the foil shaver head against the chin to remove hair. If the clipper becomes blocked by excess hair while cutting, switch the clipper off. If operating from the mains, unplug. Remove the adjustable comb and lightly brush hair from the clipper using the cleaning brush provided. Alternatively take off the shaver head from the clipper unit, and wash the shaver head ONLY under running tap water. Then dry and re-attach to the clipper for further use. If the blades are moving slowly or do not move they may be dirty or clogged. Please refer to the Cleaning and Maintenance section.

How to use the attachment combs

There are 3 attachments provided

- Cutting comb with 2,4,6,8mm cutting length for hair trimmer and beard trimmer
- Styling comb with 10,12,14,16mm cutting comb for hair trimmer only

- Blending comb with cutting length of 2mm for hair and beard trimmer
- To attach the attachment combs to the trimmer, simply slide the comb over the trimmer head with the teeth to the front of the trimmer head. Then press the comb toward the trimmer to click in place. See below figure.

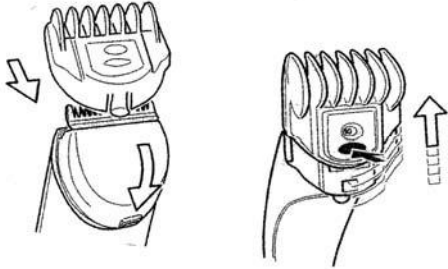

For selecting the cutting length, press the Centre knob of comb and then push up and down for the desired length. Release the centre knob, the comb is locked to the desired length.

GUIDE TO CLIPPING

- Hold the clipper with a relaxed, comfortable grip.
- Cut the hair in a relaxed and slow manner. Use short strokes, working gradually over the entire head.
- Always take off a little hair at a time, you can always trim additional hair later.
- Frequently comb the hair.
- Whilst cutting, hair may collect on top of the cutting comb. Frequently shake excess hair from the clipper, in order to maintain the speed of the motor.

CLEANING AND MAINTENANCE

- 1 Switch the clipper off, ensure it is unplugged from the mains and charger.
- 2 Remove hair clippings from the interchangeable heads and/or attachments using the brush provided.
- 3 Wipe over the casing and attachments using a damp cloth. Only the attachments can be rinsed under running water. But do not immerse the unit in water or any other liquid.
- 4 Ensure all parts are dried thoroughly with a soft towel.
- 5 Do not use harsh abrasives or cleaners.
- 6 Hair clippings should be cleaned from the clipper after every use.

Warning: Keep the Appliance Dry.

CLEANING AND MAINTENANCE continued

6. To ensure this product continues to give excellent performance and remains in pristine condition, it is recommended that the hair trimmer ceramic blades (head number 1) are oiled every 6 months, or before storing for long periods. 3 drops of oil should be added to the beard trimmer and etching and defining blades (head numbers 2 and 3) before every use.

STORAGE

- Ensure the clipper is completely dry, switched off and unplugged from the mains before storage.
- Store in original box in a cool, dry place.
- Store in a safe place, away from children.
- Please read these instructions before operating this appliance and retain for future use.

FOR DOMESTIC USE ONLY

SAFETY PRECAUTIONS

- This unit must only be used in a bathroom or shower as a battery operated (rechargeable) unit.
- Never use the mains AC/DC adaptor in a bathroom, shower or near a water source.
- Do not fully immerse the clipper body in water or any other liquid.
- This appliance is not intended for use by persons (including children) With reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

ALWAYS

- always unplug the clipper from the mains AC/DC adaptor before using the clipper in a bathroom or shower.
- always ensure hands are dry and hair is free from excess water before handling the mains AC/DC adaptor plug.
- always return the appliance as stated in the After sales service after a malfunction or if the mains AC/DC adaptor has been damaged in any manner.
- always unplug the appliance from the power supply after recharging, and when setting down.
- always unplug the mains AC/DC adaptor and ensure the operating switch is in the off position prior to fitting or removing attachments and before cleaning.
- always keep out of reach of children.
- always clean before storing away.
- always recycle used rechargeable batteries or dispose of safely.

IMPORTANT SAFE GUARDS continued


NEVER...

- never use the mains AC/DC adaptor plug in a bathroom, shower or near any source of water/liquid.
- never immerse the mains AC/DC adaptor in water or any liquid to protect against electrical hazards.
- never use for any other purpose than those described in the instructions.
- never carry or suspend the appliance by the power lead.

- never wrap the power lead around the appliance. Avoid twisting or kinking it.
- never use after a malfunction or if damage to the mains AC/DC adaptor has occurred.
- never use if the blades are damaged, they may cause injury.
- never use any adaptor/charger or attachments other than those supplied with the product.
- never fully immerse the clipper body in water.

IMPORTANT SAFE GUARDS DISPOSAL OF RECHARGEABLE BATTERIES

Rechargeable batteries are better for the environment than conventional batteries due to their long lifetime, but only if they are disposed of correctly. Do not dispose with normal household waste, but place in the specially designated waste containers provided by local councils. The Rechargeable battery must be removed from the appliances before it is scrapped For removing the Ni-Cd battery, run the unit until the battery is empty. The appliances must be disconnected from the supply mains when removing the battery. Pull out the trimming head. Use and pointed head screw driver to take out all the screw sucker. Unscrew all the screw. Hit the unit onto the floor to open the housing. Cut all soldering around the battery. Now you can take out the battery for disposal The battery must be disposed of safely.

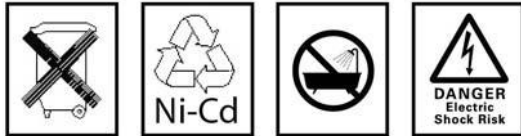

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE
IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.**

WARRANTY

1. Tedelex Trading (Pty) Limited ("Tedelex") warrants to the original purchaser of this product ("the customer") that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase ("warranty period").
2. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product ("the supplier") thereof within the warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.
3. The faulty product must be taken to the supplier's service centre to exercise the warranty.
4. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where the customer has not broken the product himself, or used the product for something that it is not supposed to be used for. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorised modification or repair of the product.
5. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer.
6. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3 (three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer.
7. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.

TEDELEX TRADING (PTY) LTD (JOHANNESBURG)

JOHANNESBURG

TEL NO. (011) 490-9600

CAPE TOWN

TEL NO. (021) 535-0600

DURBAN

TEL NO. (031) 792-6000

www.amap.co.za