



Russell Hobbs®

INSTRUCTIONS/WARRANTY



**MODEL: RHHV45
HIGH VELOCITY PEDESTAL FAN**

INTRODUCTION

Thank you for purchasing the Russell Hobbs RHHV 45 High Velocity Pedestal Fan. Each unit has been manufactured to ensure safety, reliability & ease of use. Before use, please read these instructions carefully and keep them for future reference.

CONNECTING TO POWER


Should the need arise to change the fitted/moulded plug, follow these instructions:

Mains (AC) Operation

This unit is designed to operate on 230V current only. Connecting to other power sources may damage the unit.

Connect three-pin plug as follows:

The wires in this mains lead are coloured in accordance with the following code:
Green/Yellow = Earth Blue = Neutral Brown = Live

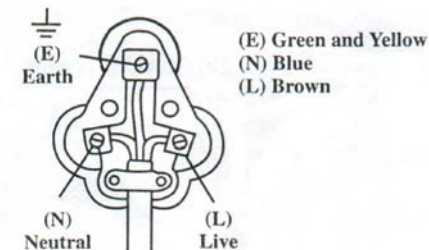

NOTE: This appliance is a class two product and as such does not have an Earth wire. Please follow the above instructions leaving out the connection for the Earth wire.

IMPORTANT SAFEGUARDS

When using your Russell Hobbs fan, basic precautions should always be followed, including the following:

- Make sure the power used corresponds to the one indicated on the rating label.
- Use the fan only for needed use as described in this instruction manual.

- To protect against electrical shock, do not place fan in front of window.
- Do not cover.
- Do not immerse unit, plug or cord in water, or allow for liquid to come into contact with any part of the fan.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the fan from the power supply when: not in use; when moving from one location to another; before putting on or taking off parts and before cleaning.
- Avoid coming into contact with any moving parts.
- To avoid vibration, place the fan on a smooth level surface.
- Never operate the fan with a damaged power cord or plug, or after it has fallen or been damaged in any way.
- Do not allow objects to fall into the openings and do not insert objects through the guard when the fan is in operation.
- Do not operate without fan grilles properly in place.
- Do not use outdoors.
- Do not operate the appliance under the following situations:
 - High temperature and humidity
 - Chemicals, oily or dusty
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- To disconnect, grip plug and pull from wall outlet. Never pull on the cord.
- Do not try to cover extend or stretch the mains cable.
- Never attempt to open any part or dismantle the controls. Responsibility for failure cannot be accepted if this instruction has been ignored.
- To reduce the risk of electrical hazards, it is recommended not to use an extension cord or plug adaptor.

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

PARTS NAME AND LOCATION

1. Blade
2. Guard
3. Screw and nut
4. Stand
5. Screw
6. Inner pillar
7. Rubber end
8. Screw
9. Outer connector
10. Outer pillar
11. Nut
12. Ornamental cover
13. Connect cover
14. Base
15. Base addition part
16. Screw



ASSEMBLY INSTRUCTIONS

Your Russell Hobbs Fan has been boxed semi-assembled to minimize packaging waste. Each part fits together easily and can be later removed for cleaning and storage.

1. Take the fan out of the box and remove any protective packaging/wrappings.
REMEMBER: DO NOT TO LEAVE PROTECTIVE PACKAGING LYING AROUND, AS IT COULD BE DANGEROUS AROUND INFANTS.
2. Do not throw the box and packaging away until such time as you are satisfied the fan is in working order.
3. Place all the parts on the floor in front of you.

4. You are supplied with:
 - a. 2 long screws (50mm) with washers and nuts – this is to secure the fan head onto the neck.
 - b. 8 medium length screws (30mm) with washers and nuts – the 4 slim nuts are used to secure the fan weight onto the fan base and the other 4 screws are used to secure the fan base on to the bottom of the fan neck.
5. Firstly assemble the base weight onto the base cover, using the four slimmer 30mm screws by inserting them from the top through the outer holes around the base cover, through the base weight till they reach the bottom of the base weight, and secure them onto the bottom of the base weight with the screw, nut and washer provided. Make sure you do not over tighten the screws, as you do not want to damage the paint or the screw threads.
6. Lift the fan base cover. Using the other four screws, secure the fan neck on to the fan base by inserting the screws through the inner holes at the top of the fan base so that they go through the base weight and secure them onto the base weight using the screw, nut and washer provided.
7. Stand the base in the upright position and place the fan head onto the top of the fan neck.
8. Insert the 50mm screws through the front of the fan head support, so that they go through the silver fan neck and out from the black support bracket.
9. Secure the two screws using the screw, nut and washer provided so that the fan head is firmly in place.
10. The fan head comes fully assembled. Make sure the blade does not touch the front grill before use.
11. Extend the middle neck support column and tighten in place using the round black lever to the side of the fan.
12. There are clips around the grill, make sure they are all aligned and secured in place.
13. Your fan is ready to use!!!

OPERATING INSTRUCTIONS

1. High velocity fans are designed to create rapid air movement; therefore, please make sure the fan is not placed near drapes, curtains, or any objects that may be drawn into the fan outlet.
2. Place the fan on a safe, flat surface, where it cannot fall or be pulled by the cord and away from a window so that it cannot blow over.
3. Control the direction of the airflow by firmly holding the fan head support in one hand adjusting the fan head to a desired position.

CAUTION: NEVER REMOVE THE FAN NECK SUPPORT KNOB WHICH HOLDS THE FAN HEAD IN PLACE

Plug the fan into a suitable electrical outlet. Choose the desired speed by moving the speed selector dial, located at the back of the fan next to the motor, in an upwards direction to one of the following positions OFF, ONE, TWO OR THREE speeds

respectively.

Your Russell Hobbs fan control has three speed settings. The various speed settings assist in regulating the airflow from the fan:

1. Number One – For low speed and air circulation
2. Number Two – For medium speed and air circulation
3. Number Three – For high speed and air circulation

It is normal for the motor to feel warm after continuous operation. This fan features a thermal cut-off that will automatically shut off the fan should it overheat for any reason. If this happens, immediately unplug the fan from the electrical power outlet and wait for about 10 – 15 minutes before trying to resume operation.

Should the fan not resume regular operation, consult the nearest Amalgamated Appliances service center.

FAN DIRECTION ADJUSTMENT

1. Do not attempt to make any adjustments to the direction of the grille and fan assembly until the fan has been turned off and unplugged from the socket.
2. To adjust the direction of the fan, hold the grille and gently tilt the fan until the desired position is reached.
3. Plug the fan back into the socket and turn the fan on.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance and contains no user serviceable parts. Do not try to fix it yourself. Refer it to qualified service personnel if servicing is needed.

This fan is permanently lubricated and will not require additional lubrication for the life of the fan.

TO CLEAN:

1. Before cleaning, always ensure the fan is switched off and disconnected from the electrical socket.
2. Wipe off dust and dirt with a warm moist cloth and then buff with dry cloth.
 - a. Do not use a cleaning solution that is harmful to paints or plastics
 - b. Do not bend the blades.
3. The motor bearings are permanently sealed and do not require additional lubrication

Before cleaning, turn fan off and unplug from electrical outlet. Wipe off excess dust with a lint-free cloth. To ensure adequate air circulation to the motor, keep vents located at the rear of the motor housing free from dust accumulation. A vacuum cleaner hose can be used to clean these vents. Do not submerge your fan in water or any other liquid. Disassemble grilles and blade. Grilles and blade may be cleaned with mild soap and water. Use a soft slightly damp cloth to wipe the remaining fan parts. Do not allow water or any other liquid to get into the motor housing or base. Re-assemble fan after grilles

and blade have dried completely. Do not plug fan into electrical outlet until it has been fully re-assembled.

TO STORE:

Make sure to disassemble and clean the fan before storing. Retain the original packaging for the purpose of storing your fan. Always store fan in a dry place. Never store it while it is still plugged in. Never wrap the cord tightly around the fan and do not put any stress on the cord where it enters the fan, as it could cause the cord to fray and break.

PROBLEM SOLVING

There are no user serviceable parts in this appliance. If the appliance is not operating correctly, please check that:

- You have followed the instructions correctly.
- The plug and cord are not damaged in any way?
- The mains power supply is ON.

If the appliance still does not work:

In the first instance, consult your retailer for possible repair or replacement. If your retailer fails to solve your problem and you need to return the appliance, make sure that:

1. The unit is packed carefully and complete into its original packaging.
2. Proof of purchase is attached.
3. Give the reason why you are returning it.

If the supply cord is damaged, it must be replaced by the manufacturer or its Service Agents in order to avoid a hazard. If service should become necessary within the warranty period, the appliance should be returned to an approved Amalgamated Appliances Pty Ltd Service Center. Servicing outside the warranty period is still available, however this will be chargeable.

PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE

IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.

WARRANTY

Amalgamated Appliances (Pty) Limited (“the Supplier”) warrants to the original purchaser of this product (“the Customer”) that this product will be free of defects in material and workmanship which under normal, personal, family or household purpose manifest themselves within a period of 365 days from the date of purchase or in respect of commercial or professional purposes, manifest themselves within a period of 90 days from the date of purchase. Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the Supplier’s normal charge for service and/or spares will be payable by the Customer upon collection of the repaired product. If a claim is made in terms of the aforesaid warranty within the first 7 days from the date of purchase, the faulty product will be exchanged (provided that the product is in its original packaging with all accessories). Failing return of the product within 7 days, the Supplier’s liability shall be limited on return to the Supplier of the product or parts thereof, to the replacement or repair (in the sole discretion of the Supplier, or its duly authorised service dealer) of the product to eliminate any defect in workmanship or materials found to be due exclusively to any acts or omissions on the parts of the Suppliers, of which defects the Supplier shall have been notified in writing by the Customer within the aforesaid warranty period. The warranty provided herein and the obligations of the Supplier as aforesaid are in lieu of, and the Customer waives, all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the Supplier in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use, this product and whether or not occasioned by the Supplier’s negligence (gross or otherwise) or any act or omission on its part. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, abuse or any non-authorized modification of the product. The warranty does not include replacement of light bulbs, heater bars, paper bags or any glass, plastic bowl or jug or other expendables. During the warranty period the product should be taken to a service centre of the Supplier or one of its duly authorised service agents. The Supplier neither assumes nor authorises any other person to assume for it, any additional liability in connection with the sale or servicing of its products.

AMALGAMATED APPLIANCES (PTY) LTD.

29 HERONMERE ROAD

BOOYSENS, JOHANNESBURG

2016

JOHANNESBURG

CAPE TOWN

DURBAN

TEL NO. (011) 490-9000

TEL NO. (021) 535-0603

TEL NO. (031) 792-6000

P O BOX 39186

BOOYSENS

2016

Visit our website: www.russellhobbs.co.za