



# Russell Hobbs®

INSTRUCTIONS/WARRANTY



**MODEL: RHPF-40**  
**RUSSELL HOBBS PEDESTAL FAN**

## INTRODUCTION

Thank you for purchasing the Russell Hobbs RHPF-40 Oscillating Pedestal fan. Each unit has been manufactured to ensure safety, reliability & ease of use. Before use, please read these instructions carefully, and keep them for further reference.

## IMPORTANT SAFEGUARDS


When using your Russell Hobbs fan, basic precautions should always be followed including the following:

- Make sure the power used corresponds to the one indicated on the rating label.
- Use the fan only for use as described in this instruction manual.
- To protect against electrical shock, do not place fan in front of a window.
- Do not cover.
- Do not immerse unit, plug or cord in water or allow for liquid to come into contact with any part of the fan.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the fan from the power supply when: not in use, when moving from one location to another, before putting on or taking off parts and before cleaning.
- Avoid coming into contact with any moving part.
- To avoid vibration, place the fan on a smooth level surface.
- Never operate the fan with a damaged power cord or plug, or after it has fallen or damaged in any way.
- Do not allow objects to fall into the openings and do not insert objects through the guard when the fan is in operation.
- Do not operate without fan grilles properly in place.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- To disconnect, grip plug, and pull from wall outlet. Never pull on the cord.
- Do not try to cover, extend or stretch the mains cable.
- Never attempt to open any part or dismantle the controls. Responsibility for

failure cannot be accepted if this instruction has been ignored.

- This product is intended for household use only. Industrial or commercial use invalidates the warranty.

## PARTS NAME & LOCATION

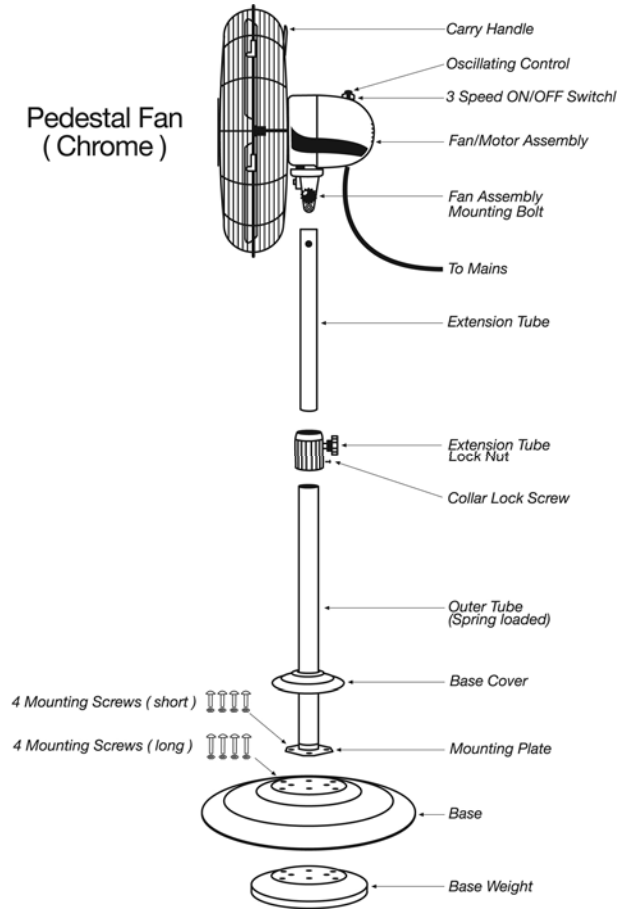

## ASSEMBLY INSTRUCTIONS

Your Russell Hobbs Fan has been boxed unassembled to minimize packaging waste. Each part fits together easily and can be removed for cleaning, and storage.

1. Take the fan out of the box and remove any protective wrappings.

2. Place all the parts on the floor.
3. Remove the four position screws on the base, align the base with the four holes on the holding plate, insert the four position screws and tighten.
4. Remove the four position screws on the motor and align the rear guard with the four holes on the motor (handle facing top of the fan) insert the four position screws and tighten.
5. Loosen the set screw on the blade; slide the blade on to the shaft of the motor. Tighten the set screw on to the flat side of the shaft to secure the blade ensuring the blade does not damage the guards.
6. Assemble the front guard to the rear guard. Tighten the connecting screw and nut; thereafter secure the retaining clips.

## OPERATING INSTRUCTIONS

1. The on/off switch is incorporated in the speed control switch on the head of the fan.
2. Your Russell Hobbs fan control has three speed settings. The various speed settings assist in regulating the airflow from the fan:
  - 0 The fan is switched off.
  - 1 The fan operates at the lowest speed.
  - 2 The fan operates at the medium speed.
  - 3 The fan operates at the highest speed.
3. The fan can operate in oscillation or static mode;
4. To make the fan head oscillate, push down the Oscillation Knob.
5. To stop the fan head from oscillating pull the Oscillation Knob up.
6. The head of the fan can be adjusted up or down - to do this unplug unit, loosen the adjusting knob; adjust the fan to the desired angle. To secure tighten the Adjusting Knob.

## CLEANING

1. Before cleaning, always ensure the fan is switched off and disconnected from the electrical socket.
2. Wipe off dust and dirt with a warm moist cloth and then buff with dry cloth.
3. Do not immerse the fan in water or other fluids.

## CONNECTING THE 3-PIN PLUG

Should the need arise to change the fitted/moulded plug, follow these instructions:

### Mains (AC) Operation

This unit is designed to operate on 230V current only. Connecting to other power sources may damage the unit.


Connect three-pin plug as follows:

The wires in this mains lead are coloured in accordance with the following:

Green/Yellow = Earth

Blue = Neutral

Brown = Live

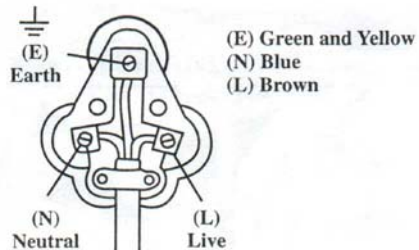

**NOTE:** This appliance is a class two product and as such does not have an Earth wire. Please follow the above instructions leaving out the connection for the Earth wire.

## PROBLEM SOLVING

There are no user serviceable parts in this appliance. If the appliance is not

operating correctly, please check that:

1. You have followed the instructions correctly.
2. The unit has been wired correctly and the wall socket is switched on.
3. The mains power supply is ON.

If the appliance still does not work:

In the first instance, consult your retailer for possible repair or replacement. If your retailer fails to solve your problem and you need to return the appliance, make sure that:

1. The unit is packed carefully and complete into its original packaging.
2. Proof of purchase is attached.
3. Give the reason why you are returning it.

If the supply cord is damaged, it must be replaced by the manufacturer or its Service Agents in order to avoid a hazard. If service should become necessary within the warranty period, the appliance should be returned to an approved Amalgamated Appliances Pty Ltd service center. Servicing outside the warranty period is still available, however this will be chargeable. If the power supplies cord becomes damaged the manufacturer or an approved service agent must replace it.

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE**

**IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE PRODUCED.**

# W A R I <sup>5</sup> . . . . . T Y

Amalgamated Appliances (Pty) Limited (“the Supplier”) warrants to the original purchaser of this product (“the Customer”) that this product will be free of defects in material and workmanship which under normal, personal, family or household purpose manifest themselves within a period of 365 days from the date of purchase or in respect of commercial or professional purposes, manifest themselves within a period of 90 days from the date of purchase. Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the Supplier’s normal charge for service and/or spares will be payable by the Customer upon collection of the repaired product. If a claim is made in terms of the aforesaid warranty within the first 7 days from the date of purchase, the faulty product will be exchanged (provided that the product is in its original packaging with all accessories). Failing return of the product within 7 days, the Supplier’s liability shall be limited on return to the Supplier of the product or parts thereof, to the replacement or repair (in the sole discretion of the Supplier, or its duly authorised service dealer) of the product to eliminate any defect in workmanship or materials found to be due exclusively to any acts or omissions on the parts of the Suppliers, of which defects the Supplier shall have been notified in writing by the Customer within the aforesaid warranty period. The warranty provided herein and the obligations of the Supplier as aforesaid are in lieu of, and the Customer waives, all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the Supplier in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use, this product and whether or not occasioned by the Supplier’s negligence (gross or otherwise) or any act or omission on its part. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, abuse or any non-authorized modification of the product. The warranty

does not include replacement of light bulbs, heater bars, paper bags or any glass, plastic bowl or jug or other expendables. During the warranty period the product should be taken to a service centre of the Supplier or one of its duly authorised service agents. The Supplier neither assumes nor authorises any other person to assume for it, any additional liability in connection with the sale or servicing of its products.

## AMALGAMATED APPLIANCES (PTY) LTD.

29 HERONMERE ROAD  
BOOYSENS, JOHANNESBURG  
2016

P O BOX 39186  
BOOYSENS  
2016

JOHANNESBURG

TEL NO. (011) 490-9000

CAPE TOWN

TEL NO. (021) 535-0603

DURBAN

TEL NO. (031) 792-6000

Visit our website: [www.russellhobbs.co.za](http://www.russellhobbs.co.za)