




Russell Hobbs



toaster

instructions

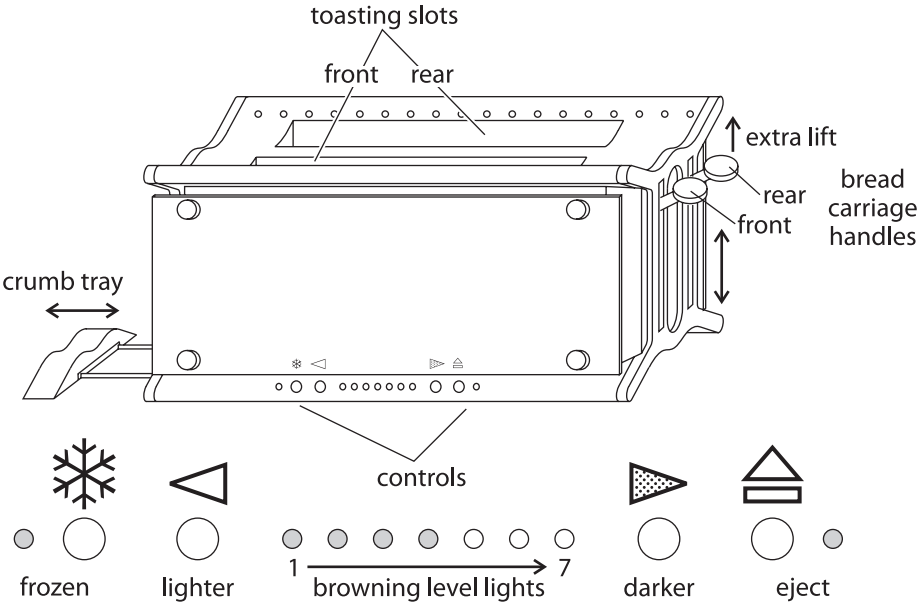




Read these instructions before use and keep them safe. If you pass the toaster on, pass on the instructions too.

Remove all packaging, but keep it till you're satisfied the toaster is working.

Important safeguards

Follow basic safety precautions, including:

- 1 This appliance should only be used by or under the supervision of a responsible adult.
- 2 Don't put the toaster in water, don't use it in a bathroom or near water contained in a bath-tub, basin or any other vessel, and don't use it outdoors. 
- 3 Position the toaster upright, on a stable, level, heat-resistant surface, near a power socket, and out of reach of children.
- 4 Don't use it near or below curtains or other combustible materials and watch it while it's hot, as bread can catch fire if overcooked.
- 5 The area round the toasting slots will get hot during use – don't touch!
- 6 Route the cable so it doesn't overhang and can't be caught accidentally.
- 7 When using only one of the toasting slots, choose the one nearest to the front of the toaster. If you use the rear slot, both slots will become "live" when you lower the bread carriage handle.
- 8 Don't let the toasting slots become covered during toasting.
- 9 If the bread carriages become jammed during the toasting cycle don't try to release it. Switch off the power socket (if appropriate), unplug the toaster, and leave it to cool down before carefully removing the bread. Don't use a knife, fork, or other sharp implement – you'll damage the elements.
- 10 Don't toast "buttered" items or try to make toasted sandwiches in the toaster, as this will create a fire hazard.
- 11 Don't use torn, curled up, or misshapen slices of bread, as these may jam the eject mechanism.
- 12 Unplug the toaster after use, and let it cool down fully before cleaning and storing away.
- 13 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.
- 14 Don't use the toaster unless the crumb tray is closed.
- 15 Don't connect this appliance to an external timer or remote control system.
- 16 Keep the toaster and cable away from hotplates, hobs and burners.
- 17 Don't use the toaster if it's damaged or malfunctions. If the cable is damaged, the toaster must be returned, in order to avoid hazard.

household use only





before using for the first time

Before using the toaster for the first time, you need to cure the elements. This will remove their protective coating.

This may smell a bit, but it's nothing to worry about. Just make sure the room is well ventilated.

Check that there's nothing in the slots, set the browning level to maximum (all browning level lights on), and operate the toaster without bread by pressing down the rear bread carriage handle.

When it's done, leave it to cool down fully, then you can use it normally.

preparation

- 1 Sit the toaster upright on a stable, level, heat-resistant surface.
- 2 Don't put it on or near anything that could be damaged even by moderate heat.
- 4 Don't put it near or below curtains or other combustible materials.
- 3 Route the cable so it doesn't overhang, and can't be caught or tripped over.
- 5 Plug it into a wall socket (if necessary, switch the socket on). The left four browning level lights will light up.





one slot

- 6 If you're using only one slot, use the front slot and front bread carriage handle.



two slots

- 7 If you're using both slots, you need only lower the rear bread carriage handle. It'll pull the front handle down with it.

making toast



- 6 Use the buttons at either end of the browning level lights to lighten  or darken  the toast. The browning level lights will come on/go out to indicate the level chosen. The more lights showing, the darker the toast.
- 8 Put bread centrally into the toasting slot(s) (maximum thickness 28mm).
- 9 Press the front (one slot), or rear (two slots) bread carriage handle down fully.
- ★ The bread carriage handle(s) won't lock down unless the toaster is connected to the electricity supply.
- 10 The light by the  button will come on and the elements will heat up.
- 11 When it's done, the toast will pop up, the light by the  button will go out, and the elements will turn off.

eject

- 12 To stop the toaster before it's finished, press the  button. The toast will pop up, the elements will turn off, and the light by the  button will go out.


frozen button

This feature takes the guesswork out of toasting frozen bread.

- 13 Set the browning level at the setting you use with normal, unfrozen bread.
- 14 Put the frozen bread into the slots, lower the bread carriage handle(s), to start the toaster, then press the  button.
- 15 The toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.
- 16 The light by the  button will come on, and the element will heat up.





- 17 When it's done, the toast will pop up, the light by the  button will go out, and the elements will turn off.

reheating toast

- 18 Use the lowest setting, and only reheat plain, unbuttered toast.

extra lift

- 19 After toasting small items (crumpets, etc.) the bread carriage handle may be raised further, to allow them to be removed more easily.

hints and tips

- 20 If you're toasting more than one slice of bread, make sure the slices are of similar size, thickness and freshness, otherwise they'll brown differently.
- 21 Old (yesterday's) bread contains less moisture than fresh bread, so makes crisper toast.
- 22 Old or thin bread cooks faster than fresh or thick bread, so you should use a lighter setting.
- 23 Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so should be toasted on a lighter setting.

care and maintenance

- 1 Unplug the toaster when not in use, before moving and before cleaning. Let it cool down before cleaning and storing away.
- 2 Wipe the outside with a soft damp cloth. If necessary, use a little washing-up liquid.
- 3 Don't let anything enter the slots, you might damage the elements.
- 4 Don't put the toaster in water or any other liquid.
- 5 Don't use harsh or abrasive cleaning agents or solvents.

crumbs

- 6 Crumbs will collect in the base of the toaster. Letting them build up is unhygienic, and could cause a fire hazard, so remove them frequently.
- 7 Unplug the toaster and let it cool down fully. Pull the crumb tray out and empty it. Wipe it with a damp cloth, dry thoroughly, then slide it back into the toaster.
- 8 Don't use the toaster unless the crumb tray is in place and closed.





changing the fitted/molded plug


Should the need arise to change the fitted/molded plug, follow these instructions:

mains (AC) operation

This unit is designed to operate on 230V- 240V current only. Connecting to other power sources may damage the unit.

connect three-pin plug as follows:

The wires in this mains lead are coloured in accordance with the following code: Green/Yellow = Earth Blue = Neutral Brown = Live

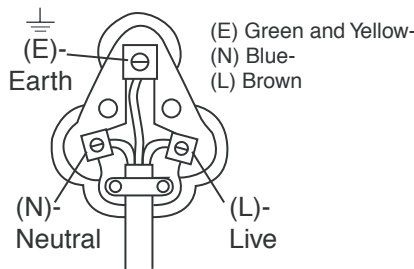

service

There are no user serviceable parts in this appliance. If the appliance is not operating correctly, please check that:

1. You have followed the instructions correctly.
2. Is the plug or cord are not damaged in any way?
3. Are the mains power supply On.

If the appliance still does not work:

In the first instance, consult your retailer for possible repair or replacement. If your retailer fails to solve your problem and you need to return the appliance, make sure that:

1. The unit is packed carefully back into its original packaging.
2. Proof of purchase is attached.
3. Give the reason why you are returning it.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agents in order to avoid a hazard. If service becomes necessary within the warranty period the appliance should be returned to an approved Amalgamated Appliances (Pty) Ltd service centre. Servicing outside the warranty period is still available, however it will be chargeable.





**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE.
IN THE EVENT OF A CLAIM UNDER WARRANTY, THIS RECEIPT MUST BE
PRODUCED.**

WARRANTY

Amalgamated Appliances (Pty) Limited ("the Supplier") warrants to the original purchaser of this product ("the Customer") that this product will be free of defects in material and workmanship which under normal, personal, family or household purpose manifest themselves within a period of 365 days from the date of purchase or in respect of commercial or professional purposes, manifest themselves within a period of 90 days from the date of purchase. Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the Supplier's normal charge for service and/or spares will be payable by the Customer upon collection of the repaired product. If a claim is made in terms of the aforesaid warranty within the first 7 days from the date of purchase, the faulty product will be exchanged (provided that the product is in its original packaging with all accessories). Failing return of the product within 7 days, the Supplier's liability shall be limited on return to the Supplier of the product or parts thereof, to the replacement or repair (in the sole discretion of the Supplier, or its duly authorised service dealer) of the product to eliminate any defect in workmanship or materials found to be due exclusively to any acts or omissions on the parts of the Suppliers, of which defects the Supplier shall have been notified in writing by the Customer within the aforesaid warranty period. The warranty provided herein and the obligations of the Supplier as aforesaid are in lieu of, and the Customer waives, all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the Supplier in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use, this product and whether or not occasioned by the Supplier's negligence (gross or otherwise) or any act or omission on its part. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, abuse or any non-authorised modification of the product. The warranty does not include replacement of light bulbs, heater bars, paper bags or any glass, plastic bowl or jug or other expendables. During the warranty period the product should be taken to a service centre of the Supplier or one of its duly authorised service agents. The Supplier neither assumes nor authorises any other person to assume for it, any additional liability in connection with the sale or servicing of its products.

AMALGAMATED APPLIANCES (PTY) LTD.

**29, HERONMERE ROAD
BOOYSENS, JOHANNESBURG
2016**

**TEL NO. (011) 490 9000
FAX NO. (011) 490 9399**

**CAPE TOWN
DURBAN**

Win prizes on line: www.russellhobbs.co.za

**P O BOX 39186
BOOYSENS
JOHANNESBURG
2016**

**TEL NO. (021) 535-0600
TEL NO. (031) 792-6000**

439-350

